




BAITCASTING REEL

COASTAL-TWS200HSL

Please order by parts number, not key number
 Veuillez indiquer le numéro de la pièce (Non "Key" No.)

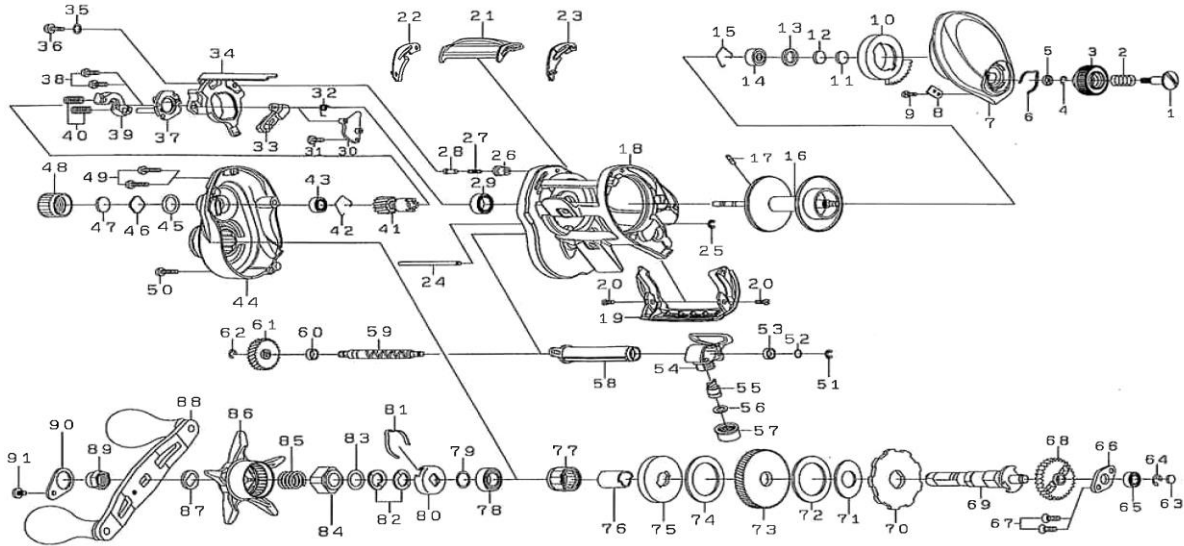

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	H93-0401	SET PLT SCREW	47	B17-5503	CAP RUBBER WASHER
2	E16-7101	SPRING (A)	48	J00-4701	CAST CONTROL CAP
3	H93-0228	BRAKE ADJ KNOB	49	G04-0814	PLT SCREW
4	B33-9801	BRAKE DIAL RETAINER	50	G04-0825	PLT SCREW
5	F63-7701	BRAKE DIAL WASHER	51	320-5901	RETAINER
6	H66-3401	BRAKE CLICK SPRING	52	B41-1700	WASHER
7	H94-4910	R/S PLATE	53	G72-0001	WORM SHAFT BEARING
8	H91-5501	BRAKE DIAL RETAINER	54	J17-6601	T-LEVEL WIND
9	G93-9301	SCREW	55	121-4212	LINE GUIDE PAWL
10	H93-0501	MAGNET HOLDER	56	373-1300	WASHER
11	375-7400	SPACER	57	F40-2801	LINE GUIDE NUT
12	375-7411	SPACER (B)	58	H94-4601	LEVEL WIND GUARD
13	G18-5101	SPACER ©	59	H91-1701	WORM SHAFT
14	G51-1507	BALL BEARING	60	G72-0001	WORM SHAFT BEARING
15	F03-2201	BEARING RETAINER	61	H91-0501	WORM GEAR
16-17	J10-7203	SPOOL ASSEMBLY	62	B33-9801	RETAINER
18	H94-3916	FRAME	63	G09-9800	WASHER
19	H93-0002	FRONT PLT	64	320-8002	RETAINER
20	H45-5402	SCREW	65	G53-8007	BALL BEARING (D)
21	H91-2401	CLUTCH LEVER	66	H92-8901	PLATE (B)
22	H91-5701	CLUTCH LEVER PLT	67	E13-4509	SCREW
23	H91-5601	CLUTCH LEVER PLT	68	H91-2701	DRIVE SHAFT GEAR
24	H91-2101	STABILIZER BAR	69	H91-1602	DRIVE SHAFT
25	H70-4101	RETAINER	70	H92-9401	A/R/ RATCHET
26	H91-0601	COLLAR	71	H66-1101	DRIVE SHAFT WASHER (A)
27	H92-8801	SPRING (B)	72	H66-1001	DRIVE SHAFT WASHER (B)
28	J05-5201	PIN	73	J07-6602	DRIVE GEAR
29	G43-1002	BALL BEARING	74	H45-2601	DRAG WASHER
30	H94-4301	PLATE	75	H91-3201	KEY WASHER
31	H29-4101	SCREW	76	G54-5001	GEAR SHAFT COLLAR
32	H47-3301	CLUTCH CAM SPRING	77	G81-9801	ROLLER CLUTCH
33	J22-1501	CLUTCH TRIP LEVER	78	G43-1002	BALL BEARING
34	H94-4001	CLUTCH CAM PLT	79	B55-3801	WASHER
35	H15-9201	WASHER	80	F02-8203	CLICK LEAF SPRING HOLDER
36	352-2501	SCREW	81	F03-2401	CLICK LEAF SPRING
37	H65-9101	CLUTCH CAM PLT	82	150-8901	SPRING WASHER
38	B03-2904	SCREW	83	H92-9501	WASHER (F)
39	H94-4401	YOKE	84	H91-2002	NUT
40	J05-5301	YOKE SPRING	85	J01-1901	SPRING ©
41	J09-2101	PINION GEAR	86	H91-1901	STAR DRAG
42	H18-0501	BEARING RETAINER	87	F57-6601	HANDLE COLLAR
43	G43-1105	BALL BEARING	88	J25-4001	HANDLE ASSEMBLY
44	H94-3823	L/S PLT	89	G79-3302	HANDLE NUT
45	171-5201	O-RING	90	H83-4510	HANDLE NUT PLT
46	B17-5406	SPACER (F)	91	353-8301	HANDLE NUT PLT SCREW