




# BAITCASTING REEL

# FUEGO CT 100HL/100HSL-100XSL

Please order by parts number, not key number  
 Veuillez indiquer le numéro de la pièce (Non "Key" No.)

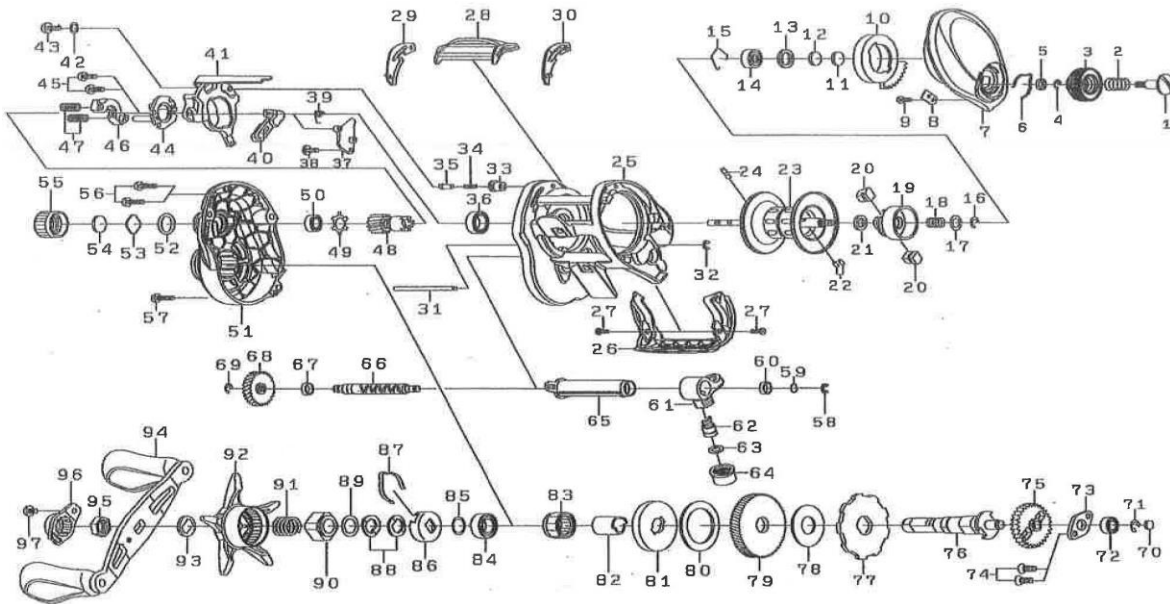

Key No.	Part No.	Part Name
1	H93-0401	BRAKE DIAL SCREW
2	E16-7101	BRAKE DIAL SPRING
3	J21-3704	BRAKE DIAL
4	B33-9801	RETAINER
5	F63-7701	BRAKE DIAL WASHER
6	H66-3401	BRAKE DIAL SPRING
7	H94-4930	RIGHT SIDE PLATE
8	H91-5501	BRAKE DIAL RETAINER
9	G93-9301	FRONT PLT SCREW
10	H93-0502	MAGNET HOLDER
11	375-7406	SPACER
12	375-7411	SPACER B
13	G18-5101	SPACER C
14	G51-1503	BALL BEARING
15	F03-2201	BEARING RETAINER
16-24	Z02-2784	SPOOL ASSEMBLY
25	J33-8012	FRAME
26	J24-4013	FRONT PLATE
27	H84-2803	SCREW
28	J33-5001	CLUTCH LEVER
29	H91-5701	CLUTCH LEVER PLT
30	H91-5601	CLUTCH LEVER PLT
31	J43-7001	STABILIZER BAR\
32	H70-4101	RETAINER
33	H91-0601	COLLAR
34	H92-8801	SPRING
35	J05-5201	PIN
36	B86-1704	BALL BEARING
37	J24-7401	PLATE (A)
38	H29-4101	SCREW
39	J24-7501	CLUTCH CAM SPRING
40	J22-1501	CLUTCH TRIP LEVER
41	J24-7201	CLUTCH CAM PLATE
42	H15-9201	WASHER
43	352-2501	SCREW
44	H65-9101	CLUTCH CAM PLATE
45	B03-2904	SCREW
46	H94-4401	PINION YOKE
47	H58-2001	PINION YOKE SPRING
48	H94-4701	PINION GEAR
49	H18-0501	PINION BALL BEARING RET
50	G43-1102	BALL BEARING
51	J21-4450	LEFT SIDE PLATE
52	B05-5201	SPOOL ADJ. CAP O'RING
53	J21-3101	SPOOL ADJ. CAP WASHER (A)
54	B17-5503	SPOOL ADJ. CAP WASHER (B)
55	H21-3601	SPOOL ADJ. CAP
56	G04-0820	SCREW
57	G04-0828	SCREW
58	320-5901	RETAINER

Key No.	Part No.	Part Name
59	B41-1703	WASHER
60	G72-0001	WORM SHAFT BEARING
61	J47-2101	LEVEL WIND
62	121-4212	OSC PAWL
63	373-1303	OSC PAWL WASHER
64	F40-2801	OSC PAWL HOLDER NUT
65	J43-2801	WORM SHAFT GUARD
66	J24-3602	WORM SHAFT
67	G72-0001	WORM SHAFT BEARING
68	H91-0501	WORM GEAR
69	B33-9801	RETAINER
70	G09-9801	DRIVE SHAFT WASHER
71	320-8002	DRIVE SHAFT RETAINER
72	B35-8607	DRIVE SHAFT BALL BEARING
73	H92-8901	DRIVE SHAFT PLATE
74	E13-4509	SCREW
75	H91-2701	DRIVE SHAFT GEAR
76	H91-1602	DRIVE SHAFT
77	H92-9401	A/R RATCHET
78	J08-5101	WASHER
79	H94-4802	DRIVE GEAR
80	H45-2602	DRAG WASHER
81	H91-3201	KEY WASHER
82	J37-7801	DRIVE SHAFT COLLAR
83	G81-9801	ROLLER CLUTCH
84	B86-1704	BALL BEARING
85	B55-3801	BALL BEARING WASHER
86	F02-8203	CLICK LEAF SPRING HOLDER
87	F03-2401	CLIKC LEAF SPRING
88	150-8901	SPRING WASHER
89	H92-9501	WASHER
90	H91-2002	NUT
91	J01-1901	SPRING
92	H91-1901	STAR DRAG
93	F57-6601	HANDLE COLLAR
94	J47-2201	HANDLE ASSEMBLY
95	H72-3702	HANDLE NUT
96	J21-3502	HANDLE NUT PLATE
97	G04-0803	HANDLE NUT PLATE SCREW

FGCT100HSL SPECIAL PARTS		
Key No.	Part No.	Part Name
48	J00-4301	PINION GEAR
51	J21-4451	LEFT SIDE PLATE
79	J00-4102	DRIVE GEAR

FGCT100XSL SPECIAL PARTS		
Key No.	Part No.	Part Name
48	J01-1301	PINION GEAR
51	J21-4452	LEFT SIDE PLATE
79	J01-1402	DRIVE GEAR