


BAITCASTING REEL RS1100

Please order by parts number, not key number
Bitte, Best: -Nr. angeben (Nicht "key"-Nr.)
Veuillez indiquer le numero de la pièce (Non "key" No.)

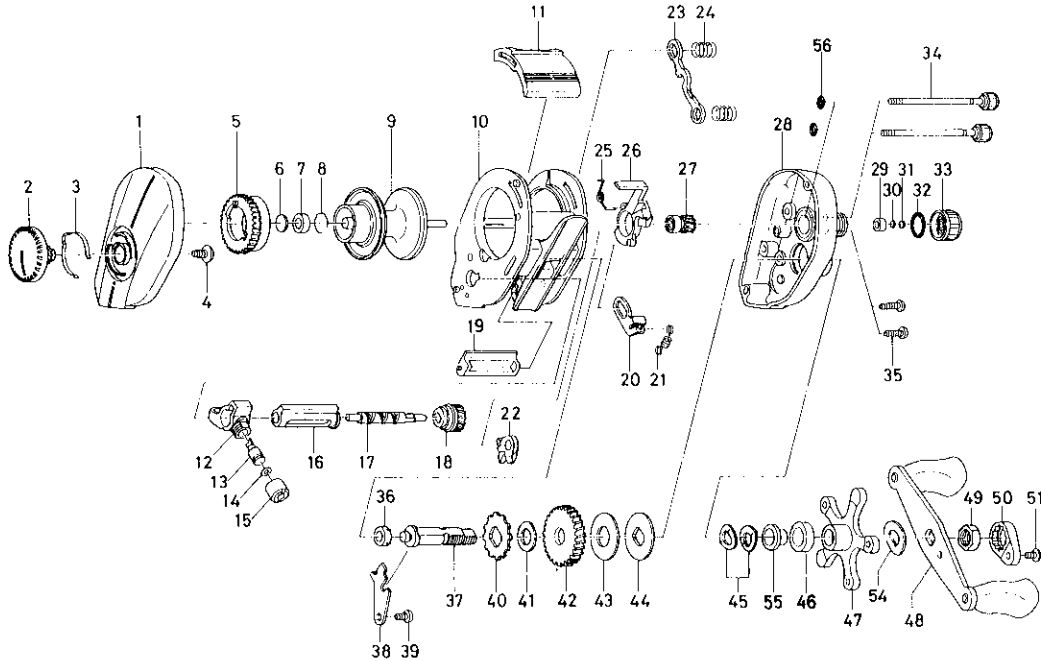

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	6-E23-8913	Left side plate	28	6-E23-8313	Right side plate
2	6-E23-9704	Brake adjusting knob	29	6-E34-2401	Bushing B
3	6-B74-7702	Brake click spring	30	6-E16-9201	Spool adjusting cap metal
4	6-E03-7801	Brake adjusting knob screw	31	6-E17-0501	Spacer B
5	6-E23-9501	Magnet holder	32	6-171-5201	"O" ring B
6	6-375-7400	Spacer A	33	6-E23-8401	Cast control cap
7	6-B55-0301	Bushing A	34	6-B91-1706	Right side plate screw
8	6-B42-1601	Bearing retainer A	35	6-E13-0501	Set plate screw
9	6-E23-9901	Spool assembly	36	6-B55-0301	Bushing C
10	6-E35-2001	Frame assembly	37	6-E23-7501	Drive shaft
11	6-E23-7104	Clutch lever	38	6-E23-7601	Drive shaft retainer
12	6-E16-6301	Line guide	39	6-B83-4402	Drive shaft retainer screw
13	6-121-4212	Line guide pawl	40	6-E32-7701	Anti-reverse ratchet
14	6-375-4100	Line guide washer	41	6-375-7103	Drive shaft washer
15	6-342-4801	Pawl cap	42	6-B36-0102	Drive gear
16	6-E23-8201	Level wind guard	43	6-B36-0202	Drag washer
17	6-E24-7101	Worm shaft	44	6-B36-0301	Key washer
18	6-B99-2001	Worm shaft gear	45	6-150-8901	Drag spring washer
19	6-E24-9403	Line guard	46	6-E32-6401	Spacing sleeve A
20	6-E23-7301	Clutch trip plate	47	6-E23-8701	Star drag
21	6-E30-6001	Clutch trip plate spring	48	6-E34-7601	Handle assembly
22	6-E23-8001	Anti-reverse pawl	49	6-B43-3601	Handle nut
23	6-E23-7701	Yoke	50	6-B43-3902	Handle nut plate
24	6-E16-7101	Yoke spring	51	6-351-1801	Handle nut plate screw
25	6-E34-6601	Clutch cam spring	54	6-150-9001	Friction washer
26	6-E23-7401	Clutch cam	55	6-E34-6801	Spacing sleeve B
27	6-E23-7801	Pinion gear	56	6-B85-3101	"O" ring B