



Key No.	Parts No.	Parts Name
1	F87-6905	BRAKE ADJ KNOB
2	F05-1701	BRAKE CLICK SPRING
3	F87-6205	L/S PLT
4	B84-2102	SET PLT SCREW
5	374-9103	SPACER A
6	374-9105	SPACER B
7	E08-8003	BALL BEARING A
8	375-3003	SPACER C
9	F41-2301	BEARING RET A
10	F87-6601	MAGNET HOLDER
11-19	Z01-2387	SPOOL
20	F87-4002	FRAME
21	F87-4302	CLUTCH LEVER PLT A
22	F87-4502	CLUTCH LEVER
23	F87-4202	CLUTCH LEVER PLT B
24	320-5901	WORM SHAFT RET
25	F65-5501	WORM SHAFT WASHER
26	B71-5601	WORM SHAFT HOLDER A
27	F90-5002	LEVEL WIND GUARD
28	F87-5102	LINE GUIDE
29	121-4212	LINE GUIDE PAWL
30	F95-0200	LINE GUIDE WASHER
31	F40-2801	PAWL CAP
32	F90-5101	WORM SHAFT HOLDER B
33	F87-5301	WORM SHAFT
34	F42-8801	CLUTCH TRIP PLT
35	F87-7901	CLUTCH TRIP PLT SPRING
36	F87-5904	FRONT PLT
37	F91-5601	STABILIZER BAR
38	F87-6006	PALMING PLT
39	F79-3401	CLUTCH CAM WASHER
40	B86-1702	BALL BEARING B
41	F87-4801	CLUTCH CAM SPRING
42	F87-4401	CLUTCH CAM
43	F87-5001	PINION GEAR
44	F87-4901	YOKE

Key No.	Parts No.	Parts Name
45	G00-4401	YOKE WASHER
46	F86-4101	YOKE SPRING
47	E21-9701	BEARING RET B
48	F05-5601	BALL BEARING C
49	F87-5809	R/S PLT
50	F80-0501	PINION SHAFT
51	B17-5402	SPOOL ADJ CAP METAL
52	B17-5503	SPACER D
53	171-5201	O RING A
54	F64-9804	CAST CONTROL CAP
55	B67-9305	R/S PLT SCREW A
56	B85-3101	O RING B
57	F96-2903	R/S PLT SCREW B
58	F64-7201	DRIVE SHAFT WASHER
59	B55-0301	BUSHING
60	F87-4701	DRIVE SHAFT RET
61	F50-5701	DRIVE SHAFT RET SCREW A
62	G17-4501	DRIVE SHAFT
63	F76-1701	A/R RATCHET
64	F87-5601	DRIVE GEAR A
65	F87-5701	DRIVE GEAR B
66	375-9405	DRAG WASHER A
67	E20-0201	KEY WASHER
68	E42-5401	DRAG WASHER B
69	F82-1301	GEAR SHAFT COLLAR
70	F58-0601	ROLLER CLUTCH
71	150-8901	DRAG SPRING WASHER
72	373-7810	SPACING SLEEVE
73	G01-1502	STAR DRAG
74	F57-6601	FRICTION WASHER
75	G17-4601	HANDLE
76	B43-3603	HANDLE NUT
77	F57-7203	HANDLE NUT PLT
78	F21-1103	CLUTCH LEVER SCREW
79	F21-1101	DRIVE SHAFT RET SCREW B