



Key No.	Parts No.	Parts Name
1	G11-0803	BRAKE ADJ KNOB
2	F05-1701	BRAKE CLICK SPRING
3	G11-0203	R/S PLT
4	F02-9801	BRAKE ADJ KNOB COLLAR
5	G11-5001	SET PLT SCREW
6	G11-0401	RIGHT SET PLT
7	351-0905	RIGHT SET PLT SCREW
8	G11-0601	MAGNET HOLDER
9	375-7404	SPACER A
10	375-7411	SPACER B
11	F57-4303	SPACER C
12	E08-8003	BALL BEARING A
13	E21-9701	BEARING RET A
14-22	Z01-2429	SPOOL
23	G10-9903	FRAME
24	F91-7006	REAR COVER
25	351-1101	REAR COVER SCREW
26	320-5901	WORM SHAFT RET
27	F65-5501	WORM SHAFT WASHER
28	B71-5601	WORM SHAFT HOLDER A
29	F90-5003	LEVEL WIND GUARD
30	F83-6202	LINE GUIDE PAWL HOLDER
31	121-4212	LINE GUIDE PAWL
32	F95-0200	LINE GUIDE WASHER
33	342-4801	PAWL CAP
34	F93-2201	WORM SHAFT HOLDER B
35	F93-3203	WORM SHAFT
36	B41-1701	DRIVE GEAR WASHER
37	F95-8401	DRIVE GEAR A
38	F95-8501	DRIVE GEAR B
39	F92-3301	DRIVE GEAR SCREW
40	F97-3201	STABILIZER BAR
41	B86-4101	STABILIZER BAR RET
43	G10-9704	PALMING PLT
44	G10-9603	FRONT PLT
45	G10-9801	BALL BEARING COLLAR
46	B86-1702	BALL BEARING B
47	F92-3901	CLUTCH CAM
48	F83-4801	CLUTCH TRIP PLT
49	F77-4603	CLUTCH TRIP PLT WASHER
50	320-5901	CLUTCH TRIP PLT RET
51	F83-5801	YOKE
52	F58-8001	YOKE SPRING

Key No.	Parts No.	Parts Name
53	F86-5303	CLUTCH LEVER
54	F94-5001	CLUTCH LEVER SPRING
56	F83-5301	CLUTCH LEVER SCREW
57	F84-5401	PINION GEAR
58	E21-9701	BEARING RET B
59	F05-5601	BALL BEARING C
60	G18-7601	L/S PLT
61	351-1107	L/S PLT SCREW A
62	F80-0501	PINION SHAFT
63	B17-5401	SPOOL ADJ CAP METAL
64	B17-5503	SPACER D
65	171-5201	O RING A
66	F57-4404	CAST CONTROL CAP
67	B85-3101	O RING B
68	B91-1738	L/S PLT SCREW B
69	F64-7201	DRIVE SHAFT WASHER A
70	B35-8605	BALL BEARING D
71	F83-5701	DRIVE SHAFT RET
72	F68-9501	CLUTCH TRIP PLT SPRING
73	F21-1101	DRIVE SHAFT RET SCREW
74	G18-7701	DRIVE SHAFT
75	F76-1701	A/R RATCHET
76	F19-0101	DRIVE SHAFT WASHER B
77	F83-7001	DRIVE GEAR
78	F79-6101	EARED WASHER
79	F79-6201	DRAG WASHER A
80	F79-6301	KEY WASHER A
81	F96-7801	DRAG WASHER B
82	F79-6401	KEY WASHER B
83	E42-5401	SPACING SLEEVE A
84	F60-2901	GEAR SHAFT COLLAR
85	F98-6401	ROLLER CLUTCH
86	B86-1702	BALL BEARING E
87	B55-3801	DRIVE SHAFT WASHER C
88	F02-8201	CLICK LEAF SPRING HOLDER
89	F03-2401	CLICK LEAF SPRING
90	150-8901	SPRING WASHER
91	373-7810	SPACING SLEEVE B
92	G19-0102	STAR DRAG
93	F57-6601	FRICTION WASHER
94	G18-3701	HANDLE
95	B43-3604	HANDLE NUT
96	F57-7204	HANDLE NUT RET