




# BAITCASTING REEL

# ZILLION-HD100HS

Please order by parts number, not key number  
 Veuillez indiquer le numéro de la pièce (Non "Key" No.)

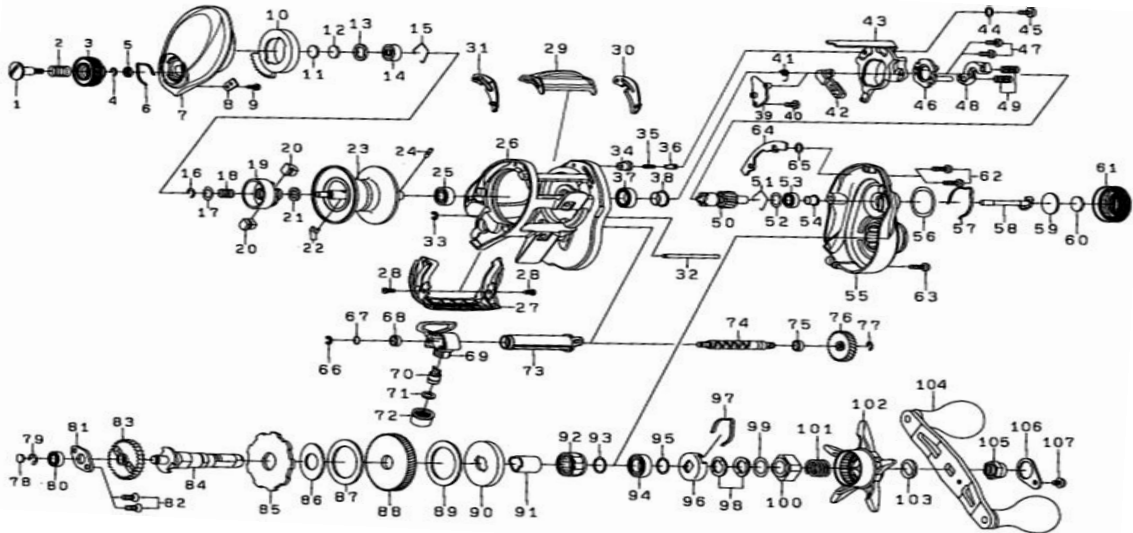

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	H93-0401	SET PLT SCREW	59	H16-1001	SPACER (F)
2	E16-7101	SPRING	60	B17-5503	SPACER (G)
3	H93-0219	BRAKE ADJ KNOB	61	J09-7403	CAST CONTROL CAP
4	B33-9801	BRAKE DIAL RET	62	G04-0822	SCREW
5	F63-7701	BRAKE DIAL WASHER	63	G04-0821	SCREW
6	H66-3401	BRAKE CLICK SPRING	64	J04-4502	PLATE (B)
7	J26-5301	L/S PLATE	65	H77-0601	O-RING (B)
8	H91-5501	BRAKE DIAL RET	66	320-5901	RETAINER (B)
9	G93-9301	SCREW (B)	67	B41-1700	WASHER
10	J04-5701	MAGNET HOLDER	68	G72-0001	WORM SHAFT BEARING
11	375-7400	SPACER (A)	69	J17-6602	T-LEVEL WIND
12	375-7411	SPACER (B)	70	121-4212	LINE GUIDE PAWL
13	G18-5101	SPACER ©	71	373-1300	WASHER (D)
14	G51-1506	BALL BEARING (A)	72	F40-2801	LINE GUIDE NUT
15	F03-2201	BEARING RET	73	H91-0801	LEVEL WIND GUARD
16-25	Z02-2528	SPOOL ASSEMBLY	74	H91-1702	WORM SHAFT
26	J04-4607	FRAME	75	G46-9007	BALL BEARING ©
27	J04-5203	FRONT PLATE	76	H91-0501	WORM GEAR
28	H45-5402	SCREW ©	77	B33-9801	RETAINER ©
29	J10-1601	CLUTCH LEVER	78	G09-9800	WASHER €
30	H91-5601	CLUTCH LEVER PLT	79	320-8002	REPAIRER (D)
31	H91-5701	CLUTCH LEVER PLT	80	G53-8007	BALL BEARING (D)
32	H91-2101	STABILIZER BAR	81	H92-8901	PLATE
33	H70-4101	RETAINER (A)	82	E13-4509	SCREW
34	H91-0601	COLLAR	83	H91-2701	DRIVE SHAFT GEAR
35	H92-8801	SPRING (B)	84	H91-1601	DRIVE SHAFT
36	J05-5201	PIN	85	H92-9401	A/R RATCHET
37	G43-1002	BALL BEARING (B)	86	H66-1101	DRIVE SHAFT WASHER (A)
38	H26-6601	COLLAR (A)	87	H66-1001	DRIVE SHAFT WASHER (B)
39	H91-2301	PLATE (A)	88	J07-5401	DRIVE GEAR
40	H29-4101	SCREW (D)	89	H45-2601	DRAG WASHER
41	H45-0001	CLUTCH CAM SPRING	90	H91-3201	KEY WASHER
42	J22-1401	CLUTCH TRIP LEVER	91	G54-5001	GEAR SHAFT COLLAR
43	H92-8701	CLUTCH CAM PLT	92	G81-9801	ROLLER CLUTCH
44	H15-9201	WASHER (A)	93	B55-3801	WASHER (F)
45	352-2501	SCREW	94	G43-1002	BALL BEARING
46	H65-9101	CLUTCH CAM PLT	95	B55-3802	WASHER (G)
47	B03-2904	SCREW	96	F02-8203	CLICK LEAF SPRING HOLDER
48	H92-9001	YOKE	97	F03-2401	CLICK LEAF SPRING
49	J05-5301	YOKE SPRING	98	150-8901	SPRING WASHER
50	J07-5301	PINION GEAR	99	H92-9501	WASHER (F)
51	H16-0801	BEARING RE (B)	100	J14-1001	NUT
52	J07-3501	WASHER (B)	101	J01-1901	SPRING ©
53	J01-9301	BALL BEARING (MS)	102	J14-0001	STAR DRAG
54	H15-9502	COLLAR (B)	103	F57-6601	HANDLE COLLAR
55	J26-5001	R/S PLATE	104	J26-5201	HANDLE ASSEMBLY
56	H15-7002	O-RING (A)	105	G79-3312	HANDLE NUT
57	H16-0901	CLICK LEAF SPRING (B)	106	H83-4504	HANDLE PLT
58	H15-9601	PINION SHAFT	107	353-8301	HANDLE SCREW