




# BAITCASTING REEL

# ZILLION-HD100HSL

Please order by parts number, not key number  
 Veuillez indiquer le numéro de la pièce (Non "Key" No.)

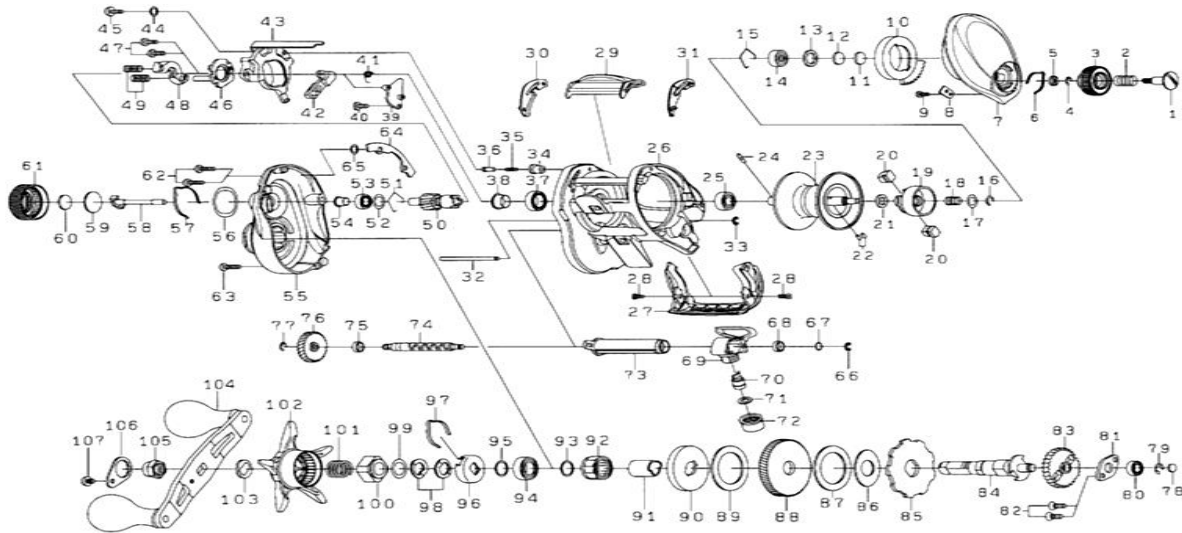

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	H93-0401	SET PLT SCREW	59	H16-1001	SPACER (F)
2	E16-7101	SPRING	60	B17-5503	CAP RUBBER WASHER
3	H93-0220	BRAKE ADJ KNOB	61	J09-7403	CAST CONTROL CAP
4	B33-9801	BRAKE DIAL RETAINER	62	G04-0822	SCREW
5	F63-7701	BRAKE DIAL WASHER	63	G04-0821	SCREW
6	H66-3401	BRAKE CLICK SPRING	64	J04-4502	PLATE (B)
7	J26-5901	R/S PLATE	65	H77-0601	"O" RING
8	H91-5501	BRAKE DIAL RETAINER	66	320-5901	RETAINER
9	G93-9301	SCREW	67	B41-1700	WASHER
10	J04-5701	MAGNET HOLDER	68	G72-0001	WORM SHAFT BEARING
11	375-7400	SPACER (A)	69	J17-6602	T-LEVEL WIND
12	375-7411	SPACER (B)	70	121-4212	LINE GUIDE PAWL
13	G18-5101	SPACER ©	71	373-1300	WASHER
14	G51-1506	BALL BEARING (A)	72	F40-2801	LINE GUIDE NUT
15	F03-2201	BEARING RET	73	H94-4601	LEVEL WIND GUARD
16-25	Z02-2528	SPOOL ASSEMBLY	74	H91-1702	WORM SHAFT
26	J06-1607	FRAME	75	G46-9007	BALL BEARING
27	J04-5203	FRONT PLT	76	H91-0501	WORM GEAR
28	H45-5402	SCREW	77	B33-9801	RETAINER
29	J10-1601	CLUTCH LEVER	78	G09-9800	WASHER
30	H91-5701	CLUTCH LEVER PLT	79	320-8002	RETAINER
31	H91-5601	CLUTCH LEVER PLT	80	G53-8007	BALL BEARING (D)
32	H91-2101	STABILIZER BAR	81	H92-8901	PLATE
33	H70-4101	RETAINER	82	E13-4509	SCREW
34	H91-0601	COLLAR	83	H91-2701	DRIVE SHAFT GEAR
35	H92-8801	SPRING (B)	84	H91-1602	DRIVE SHAFT
36	J05-5201	PIN	85	H92-9401	A/R RATCHET
37	G43-1002	BALL BEARING	86	H66-1101	DRIVE SHAFT WASHER (A)
38	H26-6601	COLLAR	87	H66-1001	DRIVE SHAFT WASHER (B)
39	H94-4301	PLATE (A)	88	J07-6601	DRIVE GEAR
40	H29-4101	SCREW	89	H45-2601	DRAG WASHER
41	H47-3301	CLUTCH CAM SPRING	90	H91-3201	KEY WASHER
42	J22-1501	CLUTCH TRIP LEVER	91	G54-5001	GEAR SHAFT COLLAR
43	H94-4001	CLUTCH CAM PLT	92	G81-9801	ROLLER CLUTCH
44	H15-9201	WASHER	93	B55-3801	WASHER
45	352-2501	SCREW	94	G43-1002	BALL BEARING
46	H65-9101	CLUTCH CAM PLT	95	B55-3802	WASHER
47	B03-2904	SCREW	96	F02-8203	CLICK LEAF SPRING HOLDER
48	H94-4401	YOKE	97	F03-2401	SPRING
49	J05-5301	YOKE SPRING	98	150-8901	SPRING WASHER
50	J07-6501	PINION GEAR	99	H92-9501	WASHER
51	H16-0801	BEARING RET	100	J14-1002	NUT
52	J07-3501	WASHER	101	J01-1901	SPRING ©
53	J01-9301	BALL BEARING (MS)	102	J14-0001	STAR DRAG
54	H15-9502	COLLAR (B)	103	F57-6601	HANDLE COLLAR
55	J26-5801	L/S PLATE	104	J26-5201	HANDLE ASSEMBLY
56	H15-7002	"O" RING	105	G79-3313	HANDLE NUT
57	H16-0901	CLICK LEAF SPRING (B)	106	H83-4504	HANDLE NUT PLT
58	H15-9601	PINION SHAFT	107	353-8301	HANDLE NUT PLT SCREW