



Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	171-6201	L. S. ring	28	145-2501	Eccentric cam spring
2	353-6201	L. S. plate screw	29	782-5401	Clutch lever
3	783-3502	Frame	30	160-8001	Clutch lever lock washer
4	541-6501	Click button	31	363-5301	Clutch lever screw
5	375-9301	Click button washer	32	145-2801	Anti-reverse claw spring
6	375-1101	Click claw washer A	33	B12-0701	Anti-reverse claw
7	030-6221	Click claw	35	B40-3001	Set plate screw
8	373-1600	Click claw washer B	36	171-1001	"O" ring
9	320-1402	Click claw retainer	37	145-3101	Spool adjusting spring
10	353-9801	Rod clamp screw	38	375-7501	Spool adjusting cap metal
11	341-9701	Rod clamp nut	39	382-0301	Spool adjusting cap
12	041-5601	Rod clamp	40	375-2901	Drive gear washer
13	342-2111	Rod clamp wing nut	41	413-9511	Drive gear
14	375-9802	Friction ring	42	375-9902	Drag washer A
15	171-1001	"O" ring	43	376-3401	Drag washer B
16	720-2711	Case metal	44	376-3501	Drag washer C
17	160-7921	Click spring	45	376-3601	Drag washer D
18	351-7701	Click spring screw	46	501-9311	Spacing sleeve
19	733-3013	Spool	47	151-8701	Drag spring washer
20	782-5502	Set plate	48	782-5304	Star drag
21	750-6011	Pinion gear	49	151-9701	Handle washer
22	720-2321	Ball bearing metal	50	747-4211	Handle
23	760-4912	R. S. plate	51	780-7502	Handle screw
24	041-5701	Eccentric jack	52	353-2811	Handle lock screw
25	041-5801	Pinion yoke	53	B03-7201	Set plate screw retaining nut
26	145-2411	Clutch spring	54	B35-2601	Clutch lever screw holder
27	461-6801	Eccentric cam			