


EMCAST Plus 4500/5000

Please order by parts number, not key number
Bitte, Best.-Nr. angeben (Nicht "Key"-Nr.)
Veuillez indiquer le numero de la pièce (Non "Key" No.)

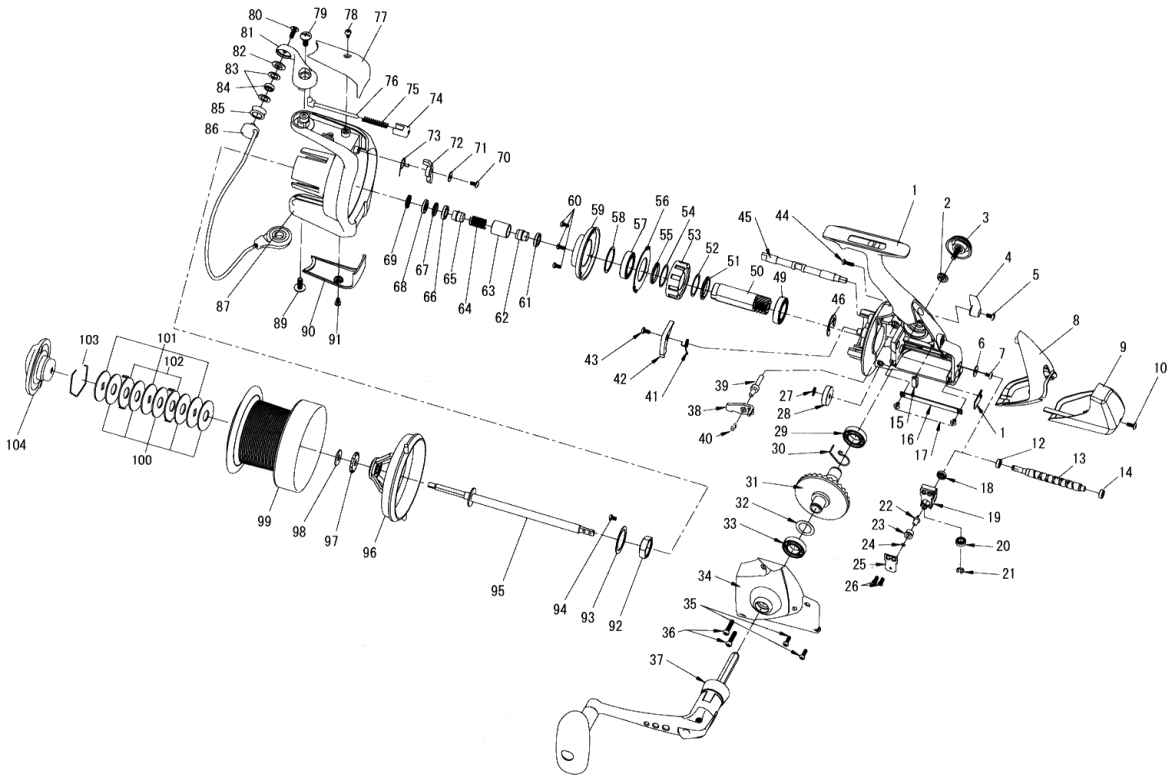

Key No.	Parts No.	Parts Name
1	6W3600110	Body Assembly
2	6W3601010	Washer (A)
3	6W3602010	Handle Screw
4	6W3603010	Anti-Reverse Lever
5	6W3604010	Screw (A)
6	6W3605020	Bearing Retainer (A)
7	6W3606010	Screw (B)
8	6W3607020	Rear Cover (A)
9	6W3608020	Rear Cover (B)
10	6W3609010	Screw (C)
11	6W3610020	Worm Shaft Retainer (A)
12	6W3611010	Bushing
13	6W3612020	Worm Shaft
14	6W3613020	Ball Bearing (A)
15	6W3614010	Anti-Reverse Cam Spring
16	6W3615020	Stabilizer bar
17	6W3616010	Screw (D)
18	6W3617010	Ball Bearing (B)
19	6W3618020	Oscillating Slider
20	6W3619010	Ball Bearing (C)
21	6W3620010	Bearing Retainer (B)
22	6W3621020	Oscillating Pawl
23	6W3622020	Collar (A)
24	6W3623010	Washer (B)
25	6W3624020	Oscillating Slider Cover
26	6W3625010	Screw (E)
27	6W3626010	Worm Shaft Retainer (B)
28	6W3627020	Worm Shaft Gear
29	6W3628020	Ball Bearing (D)
30	6W3629010	Anti-Reverse Pawl Spring (A)
31	6W3630020	Drive Gear
32	6W3631010	Washer (C)
33	6W3628020	Ball Bearing (E)
34	6W3632020	Side Cover
35	6W3633010	Screw (F)
36	6W3634010	Screw (G)
37	6W3635020	Handle Assembly
38	6W3636020	Anti-Reverse Pawl (A)
39	6W3637020	Collar (B)
40	6W3638510	Retainer
41	6W3639010	Anti-Reverse Pawl Spring (B)
42	6W3640010	Anti-Reverse Pawl (B)
43	6W3641010	Screw (I)
44	6W3642010	Screw (J)
45	6W3643020	Anti-Reverse Cam
46	6W3644010	Pinion Retainer
49	6W3647020	Ball Bearing (F)
50	6W3648020	Pinion Gear
51	6W3649010	Collar (C)
52	6W3650010	Washer (E)
53	6W3651010	Roller Clutch
54	6W3652010	Washer (F)
55	6W3653010	Collar (D)
56	6W3654010	Bearing Retainer (A)
57	6W3647010	Ball Bearing (G)
58	6W3655010	Washer (G)
59	6W3656010	Bearing Retainer (B)
60	6W3657010	Screw (K)
61	6W3658010	Ball Bearing (H)
62	6W3659020	Collar (E)
63	6W3660010	Spacing Sleeve
64	6W3661010	Main Shaft Spring (A)
65	6W3662020	Collar (F)
66	6W3658010	Ball Bearing (I)
67	6W3663010	Washer (H)
68	6W3664020	Washer (I)
69	6W3665010	Main Shaft Spring (B)
70	6W3666010	Screw (L)
71	6W3118010	Washer (J)
72	6W3668020	Bail Trip Lever
73	6W3669010	Bail Trip Lever Spring
74	6W3670010	Bail Spring Holder
75	6W3671010	Bail Spring
76	6W3672020	Bail Spring Shaft
77	6W3673020	Cover (A)
78	6W3674010	Screw (M)
79	6W3675010	Screw (N)
80	6W3676010	Screw (O)
81	6W3677010	Bail Arm
82	6W3062010	Collar (G)
83	6W3061010	Washer (K)
84	6W3680010	Ball Bearing (J)
85	6W3681010	Line Roller
86	6W3682020	Bail Assembly
87	6W3683020	Rotor
89	6W3684010	Screw (P)
90	6W3685020	Cover (B)
91	6W3686010	Screw (Q)
92	6W3687020	Rotor Nut
93	6W3688010	Rotor Nut Holding Plate
94	6W3689010	Screw (R)
95	6W3690020	Main Shaft
96	6W3691020	Line Guard
97	6W3692010	Click Gear
98	6W3693010	Washer (L)
99-103	6W3694220	Spool Assembly
99-103	6W3694240	Spool Assembly (Extra Spool)
100	6W3696010	Drag Washer
101	6W3697010	Key Washer
102	6W3698010	Eared Washer
103	6W3699010	Drag Washer Retainer
104	6W3695010	Drag Knob

EMCAST Plus 5000 SPECIAL PARTS

Key No.	Parts No.	Parts Name
99-103	6W3694320	Spool Assembly
99-103	6W3694340	Spool Assembly (Extra Spool)