



# REMOTE JOG

---

Instruction Manual

# Index

Thank you so much for purchasing our product.  
Read this manual carefully for proper use before you start using the REMOTE JOG.  
Keep this manual in a safe place for future reference.

Precautions for handling batteries (Warnings) .....	1
Safety precautions	

Precautions for handling batteries .....	2
Precautions for use of IC counter	
Precautions for use	

How to clean up .....	3
-----------------------	---

Name of each part・How to operate .....	4
Name of each part	
Button names and functions	
Jog Power Lever operation	

How to use the Menu screen .....	5
----------------------------------	---

How to connect the REMOTE JOG .....	6~12
Connection pattern 1	6,7
Connection pattern 2	8
Connection pattern 3	9,10
Connection pattern 4	11,12

How to replace the batteries .....	13
------------------------------------	----

Other configuration methods .....	14,15
How to select the alarm ON/OFF	14
Backlight	14
How to select the language	15
Certification	15

Specifications .....	16
----------------------	----

Before assuming it is malfunctioning .....	16
--	----



# Precautions for handling batteries (Warnings)

## **WARNING**

1. Keep the batteries out of the reach of infants. If infant happens to swallow a battery, immediately seek medical attention. Swallowing a battery can cause chemical burn or penetration of the mucous membrane tissue, in the worst case, may result in death.
2. If battery fluid gets into the eyes, do not rub eyes. It may cause eye damage. Immediately flush eyes thoroughly with tap water or clean water and then seek medical attention.
3. Do not throw the battery into fire. Do not heat or disassemble the battery. Doing so may cause damage of insulators, etc., and may cause leakage, heat generation, explosion, or fire of the battery.
4. Do not use the product with positive (+) and negative (-) terminals of the battery reversed. This may cause abnormal reactions of the battery in the event of battery charging or short circuit, resulting in leakage, heat generation, explosion, or fire of the battery.
5. If the battery fluid gets into your mouth, immediately gargle and seek medical attention.
6. Do not attach the battery to the skin with a cellophane tape or other means. This may damage the skin.
7. If a battery has leakage or odor, keep it away from fire immediately to prevent fire of the leaked liquid.
8. Do not do the following as it may cause leakage, heat generation, explosion, or fire of the battery.
  - Do not connect positive (+) and negative (-) terminals of the battery with a wire, etc. Do not carry or store batteries together with metal goods such as a metal necklace or hairpin. Doing so may cause the battery to short-circuit, resulting in excessive current flow.
  - Do not recharge batteries. Recharging a battery may cause heating of the electrolyte in the battery and generation of gas, resulting in rising of the internal pressure.
  - Do not solder the battery directly. Doing so may damage insulation and other components due to heat.
  - When storing or discarding batteries, insulate the terminals with a tape or other means. Do not mix batteries with other batteries or metal objects. This may cause a short circuit.

## **Safety precautions**

## **Caution**

1. After pairing the REMOTE JOG with the reel unit, be sure to check the operation of the REMOTE JOG with your own reel and confirm that the pairing is proper before using the reel. If you accidentally pair the REMOTE JOG with someone else's reel, it may lead to an accident due to malfunction.
2. Failure to securely close the battery cap may cause the batteries to pop out, resulting in accidents, injury, damage to household goods, or malfunction.
3. Do not leave the product on the floor. Doing so may cause stepping on and breaking it, or tripping over it, resulting in injury.
4. Do not place the product within the reach of infants or on unstable surfaces. Dropping it may cause injury or malfunction.
5. Do not swing the REMOTE JOG around by holding only the strap. The strap may break, causing accidents, injury, damage to household goods, or malfunction.
6. If you notice any unusual noises, smoke, or strange smells, immediately remove the batteries. Make sure that no more smoke is coming out and then call SPORTLIFE PLANETS, Inc. for inspection. If the product is used as it is, it may cause a fire or malfunction.

# Precautions for handling batteries

## **Caution**

1. Turn the power OFF before replacing the batteries.
2. Replace batteries indoors in a place with low humidity, and be careful not to allow water droplets, etc. to enter the battery case.
3. Do not leave the battery case open for a long time. (Battery replacement should be completed within 5 minutes.)
4. Do not touch the exposed metal parts that appear when the batteries are removed, with your hands or metal objects.
5. Remove the batteries from the main unit when not using the product for a long time.
6. Dispose of used batteries according to local disposal procedures.
7. Be aware that waterproof performance or functions may be impaired if the battery cap, packing, or other parts are damaged or foreign matter gets into them when replacing batteries.
8. Do not do the following as it may cause leakage, heat generation, explosion, or fire of the batteries.
  - Do not drop the battery, subject it to strong shocks, or deform it.
  - Do not use or leave batteries in places exposed to high temperature or direct sunlight or in a car under the blazing sun for a long time.
  - Do not expose the batteries to water.
  - Do not use or store batteries in direct sunlight or in places subject to high temperature or high humidity. This may reduce the battery life.
  - Do not use batteries if you notice anything different from usual such as heat generation or deformation during using or storing batteries.

## Precautions for use of IC counter

## **Caution**

1. Do not use the IC counter in an unreasonable manner such as submerging it in water.
2. To ensure water resistance, the battery cap is securely closed before shipment. Do not open or close the battery cap except for battery replacement.
  - \* Use the RESET BUTTON to turn the counter ON or OFF.
3. The LCD display may be difficult to see in midwinter (counter surface temperature: -10°C or lower) and mid-summer (counter surface temperature: 60°C or higher) due to its performance.
4. When using polarized glasses, the LCD display may be difficult to see due to its performance.
5. When the power is turned on, a part of the LCD display may light up momentarily due to static electricity, etc. This is not a malfunction. Feel free to use it.

## Precautions for use

## **Caution**

1. REMOTE JOG can only be used after it is paired with the reel unit to be used.
2. Use the REMOTE JOG at a distance where you can check the condition of the reel and respond immediately to unexpected line or mechanical problems. (Do not use it in situations where you cannot see the reel)
3. There may be a time lag in reel operation depending on the communication situation. Be aware of this.
4. When opening the battery cap, be careful for the batteries inside not to pop out.
5. The communication intensity may be significantly reduced depending on the usage conditions, such as inside the cabin. Check the communication status indicated on the main unit before use.
6. Do not bring magnets close to the REMOTE JOG. It may cause unstable operation.
7. If the pairing between the REMOTE JOG and the reel is lost, reconnect them.

# How to clean up

1. Wash the main unit with a soft sponge or similar one moistened with neutral detergent to remove dirt.

\* If the unit is heavily soiled, use only diluted neutral detergent.

\* Dilution ratio as a reference: 1.5ml of detergent per 1L of water.

Do not use any soaps or detergents such as liquid soap (medicinal soap) or mildly alkaline detergent other than neutral detergent.

2. Remove detergent and dirt by splashing water. Remove the silicon cover and splash water on the main unit and the silicon cover to remove salt.

When using a water heater, set the temperature to 30°C or lower.

3. Drain water well and dry in shade.



\* Do not lubricate the LCD screen. This may cause malfunction of the electrical components.

\* Install the silicon cover after it is completely dry. Installation while it is still wet may cause water ingress.

\* Water tends to accumulate on the silicon cover. So, be especially careful when draining the cover.


## Caution

- Never wash the product in seawater or soak it in water.
- Never use organic solvents such as benzene or thinner.
- Never use abrasives, scourers, steel scourers, etc., as they will scratch the main unit.
- Keep magnetic materials away from the main unit.
- Do not lubricate the area around the IC counter. Do not clean such area with chemicals or other organic solvents. Doing so may result in malfunction of the electrical components.
- Do not disassemble the main unit for cleaning, as the internal structure is complicated.
- Do not use commercially available rust-preventive lubricants, etc., as they may result in a loss of durability of internal mechanical parts, etc.

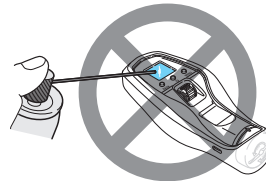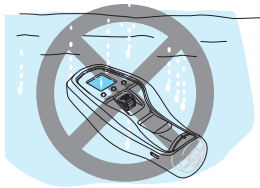


# Name of each part · How to operate

## Name of each part

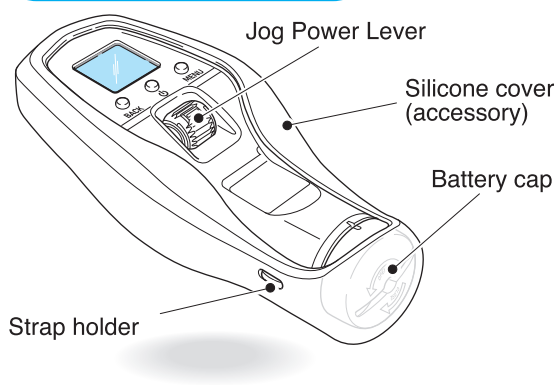


## Button names and functions

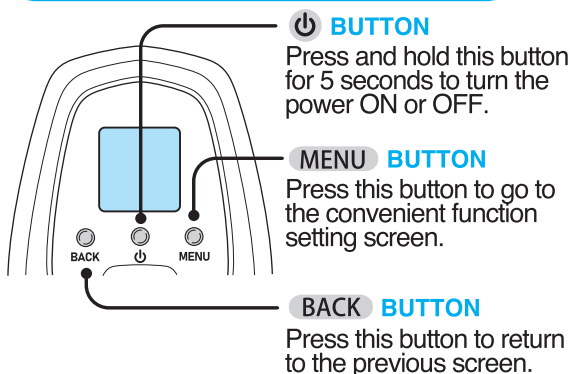

- If the REMOTE JOG is operated while the electric reel is set to Pause, the winding will remain stopped even if the PICKUP BUTTON is released for winding. (PICKUP BUTTON operation for pause or winding will be disabled)
  - If you operate the REMOTE JOG paired with the reel and the Menu screen is displayed, winding-up using the connected reel will be disabled. Complete setting in the Menu screen of the REMOTE JOG or return to the Water Depth screen from the Menu screen and then start winding operation.
  - Winding can be started with either the Power Lever on the reel unit or the Jog Power Lever on the REMOTE JOG. If you want to stop winding, return the lever to OFF with either the Power Lever of the reel or the Jog Power Lever of the REMOTE JOG during winding.
- With the pairing established, the motor output can be adjusted when the value of the operated lever position catches up with the actual motor output value.
- For example, if the reel is driven at the motor output value 20 while the value of the Power Lever position is 15, the motor output value will not change by operating the Power Lever from 15 to lower to 5 or raise to 19, but further operating it to raise to 26 (your lever operation catching up with 20 and reaching 26) will allow the reel to wind up at the motor output 26.
- If communication is lost while winding with the paired reel, the winding will be immediately stopped for safety. To restart winding, operate the Power Lever on the reel unit or reconnect them and then operate the REMOTE JOG.


## Jog Power Lever operation

- The lever can be operated by rotating it with your thumb.
  - The winding output (power/speed) can be flexibly varied from OFF to MAX by operating the lever.
  - If you want to stop winding, return the lever to OFF.
  - If you want to increase the output, rotate the lever forward (toward MAX side).
- If you want to decrease the output, return the lever to the original position (toward OFF side).
- If the lever is not in the OFF position when you start winding, return the lever to the OFF position once (an alarm will sound at the OFF position) and then rotate the lever forward to start winding.
  - For safety reasons, the lever operation may be disabled near the auto stop position.
  - The displayed setting value with the lever may be fluctuated due to fluctuations in the winding load, etc. This is not abnormal.

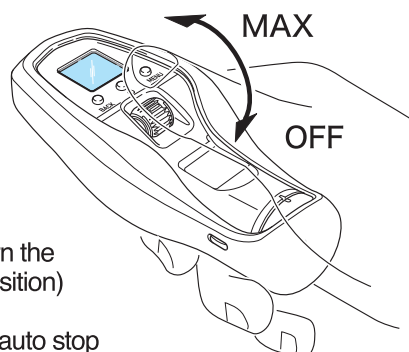


# How to use the Menu screen

1. Press the **MENU** **BUTTON** when the display shows **0.0**.
2. Select your desired function with the Jog Power Lever and press **OK** ( **MENU** **BUTTON** ) to set various parameters.

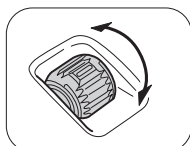

Select your desired menu with the Jog Power Lever.

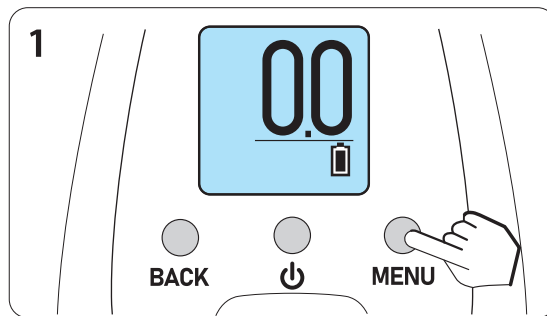


(Water Depth screen)

## ■ How to operate the menu

In the case of Menu screen:

(Menu screen)

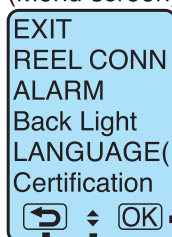

Press **OK** ( **MENU** **BUTTON** ) to go to the next screen.

When **▲** or **▼** is displayed, you can select your desired option using the lever.

Press **←** ( **BACK** ) **BUTTON** to return to the previous screen.

3. When setting is finished and the screen returns to the Water Depth screen, the setting is complete.



Antenna icon	
	Connection status: Good
	Connection status: Medium
	Connection status: Poor
	Alternately displayed: No connection with the reel

Battery level icon	
	Icon indicating battery level is full
	Icon indicating battery level is half
	Blinking icon indicating low voltage

\* When the battery life is coming to an end, the low-voltage icon appears on the counter. Replace the batteries with new ones as soon as possible.

- \* REMOTE JOG will alarm you when the connection status is unstable.
- \* Even if the reel and the REMOTE JOG are in close proximity, the radio wave intensity may temporarily drop due to the characteristics of wireless communication and an alarm may sound. This is not abnormal.

# How to connect the REMOTE JOG

## Connection pattern 1

To connect both the REEL and the REMOTE JOG for the first time




**Caution**

\* **Be sure to stop the motor to operate the reel.**

※ ..... No operation is required. ※ — operation is required.

REEL A

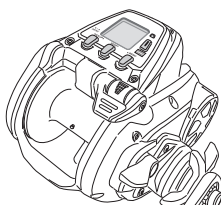


REMOTE JOG A



1. Power the reel on.

1




2. Press and hold the  **POWER** button for 5 seconds to startup the REMOTE JOG.

2




4. Select "REMOTE JOG" in the Menu screen and press **OK**.

4

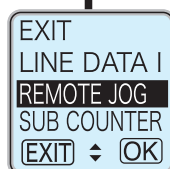


3. When the new connection screen appears, press **OK**.

3

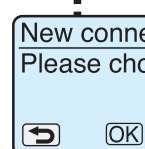

5. The new connection screen appears.


\* If the Prepare Connection screen appears, press the  **BACK** button.

5




6. Select the number identical to the number of the reel to be connected and press **OK**.

6

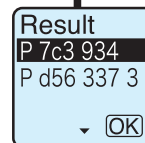


7. A confirmation message "Are you sure to connect to this?" is displayed. If you are sure, press **OK** on the reel.

7

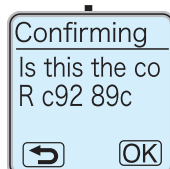

# How to connect the REMOTE JOG

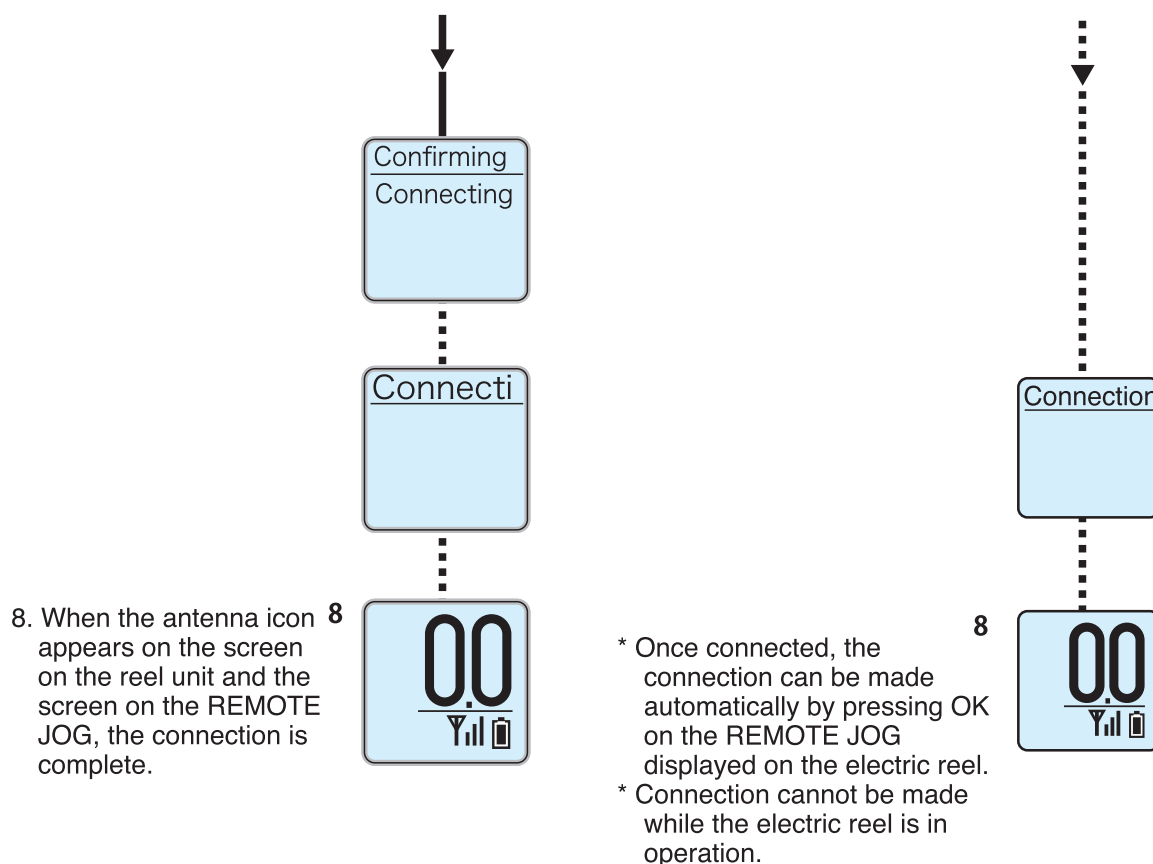



# How to connect the REMOTE JOG

## Connection pattern 2

To connect the same REEL and the same REMOTE JOG for the second and subsequent times

### ⚠ Caution

\* Be sure to stop the motor to operate the reel.

※ ..... No operation is required. ※ — operation is required.



1. Power the reel on.

1








2. Press and hold the **BUTTON** for 5 seconds to startup the REMOTE JOG.

2



3. A message "Are you sure to reconnect to this REMOTE JOG?" is displayed. Then, check that the REMOTE JOG No. displayed on the reel and on the remote control unit are the same. If so, press **OK** on the reel.

3

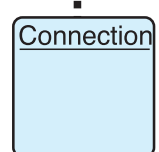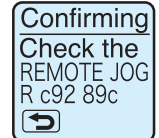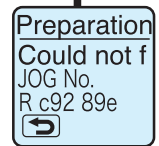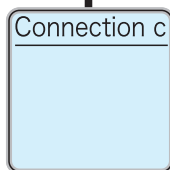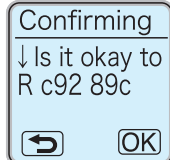

4. When the antenna icon appears on the screen on the reel unit and the screen on the REMOTE JOG, the connection is complete.

4



4





# How to connect the REMOTE JOG

## Connection pattern 3

To connect to another reel

\*To cancel the connection between the already connected REEL A and the REMOTE JOG A and then establish a connection between the REEL B and the REMOTE JOG A


### ⚠ Caution

\* Be sure to stop the motor to operate the reel.

※ ..... No operation is required. ※ — operation is required.



1. Power the reel on.


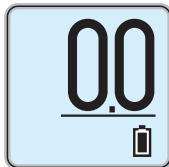


1. Press the **MENU** **BUTTON** on the REMOTE JOG.

2. Select "Connect Reel" and press **OK**.  
\* If the Prepare Connection screen appears, press the **PREPARE** **BUTTON** twice.

3. A message "Already connected to the reel. Do you cancel it and establish a new connection?" is displayed. Then, press **OK**.

5. Select "REMOTE JOG" in the Menu screen and press **OK**.

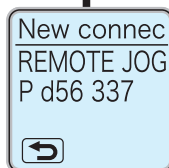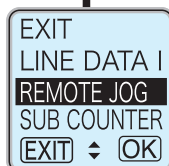


1



Connected



Press OK

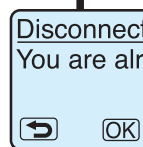


Press OK

4. Press **OK** to newly connect the REMOTE JOG.




\* An alarm alerts you with four beeps and then the connection is disconnected.

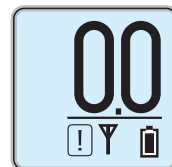


Disconnected

\* An alarm of disconnection is displayed temporarily but operation can be continued.

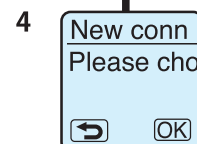


Press OK

6. Select the number identical to the number of the reel to be connected and press **OK**.

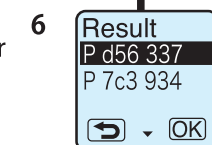

Press OK

# How to connect the REMOTE JOG

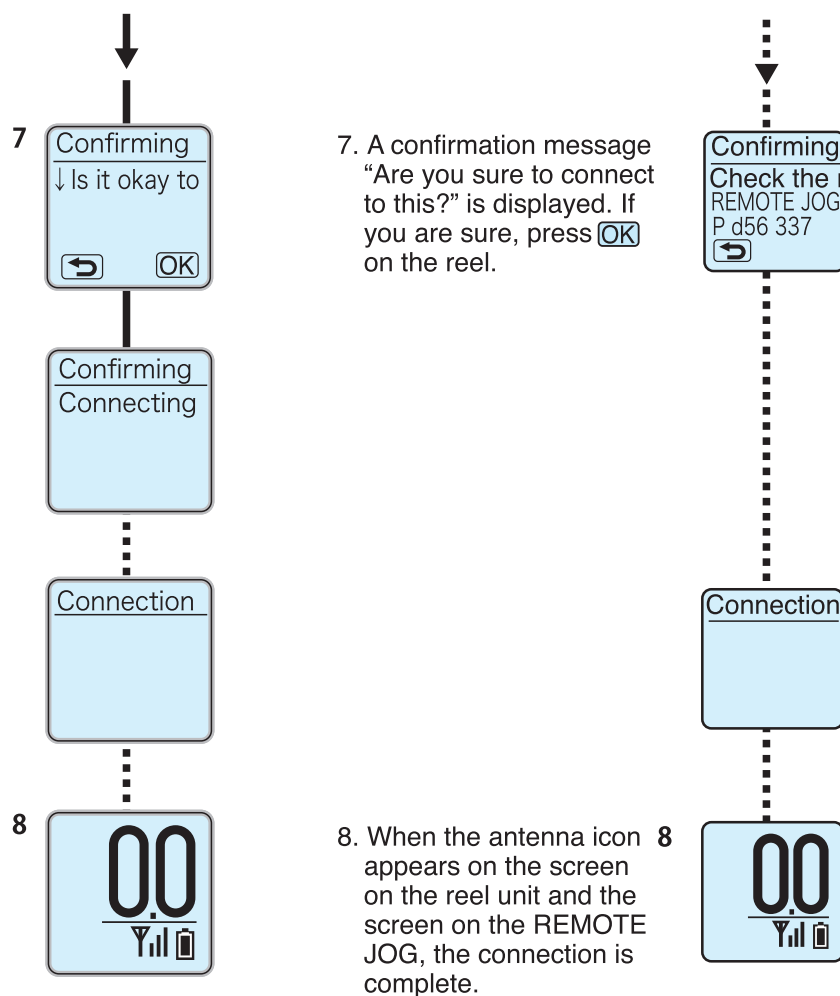

# How to connect the REMOTE JOG

## Connection pattern 4

To connect to another REMOTE JOG

\*To cancel the connection between the already connected REMOTE JOG A and REEL A and then establish a new connection between the REMOTE JOG B and the REEL A




**Caution**


\* **Be sure to stop the motor to operate the reel.**

※ ..... No operation is required. ※ — operation is required.

REMOTE JOG B

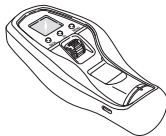

REEL A

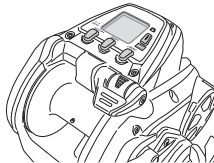


REMOTE JOG A



1. Press and hold the **POWER** **BUTTON** for 5 seconds to startup the REMOTE JOG.

1

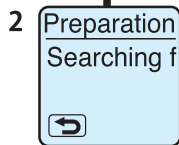

2

2. A message "Searching for the previous reel" is displayed. Then, press the **LEFT** **BUTTON**.




3. Select "REMOTE JOG" in the Menu screen and press **OK**.

Press **LEFT**



5

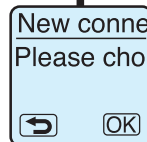

Press **OK**

5. When the new connection screen is displayed on the reel, press **OK** on the REMOTE JOG.




Connected



\* If the reel is winding, stop it.

\* An alarm alerts you with four beeps and then the connection is disconnected.

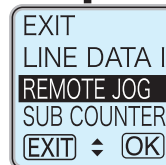

Press **OK**




\* An alarm of disconnection is displayed.



Disconnected

4

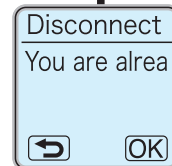


Press **OK**

4. A message "Already connected to REMOTE JOG. Do you cancel it and establish a new connection?" is displayed. Press **OK**.



# How to connect the REMOTE JOG

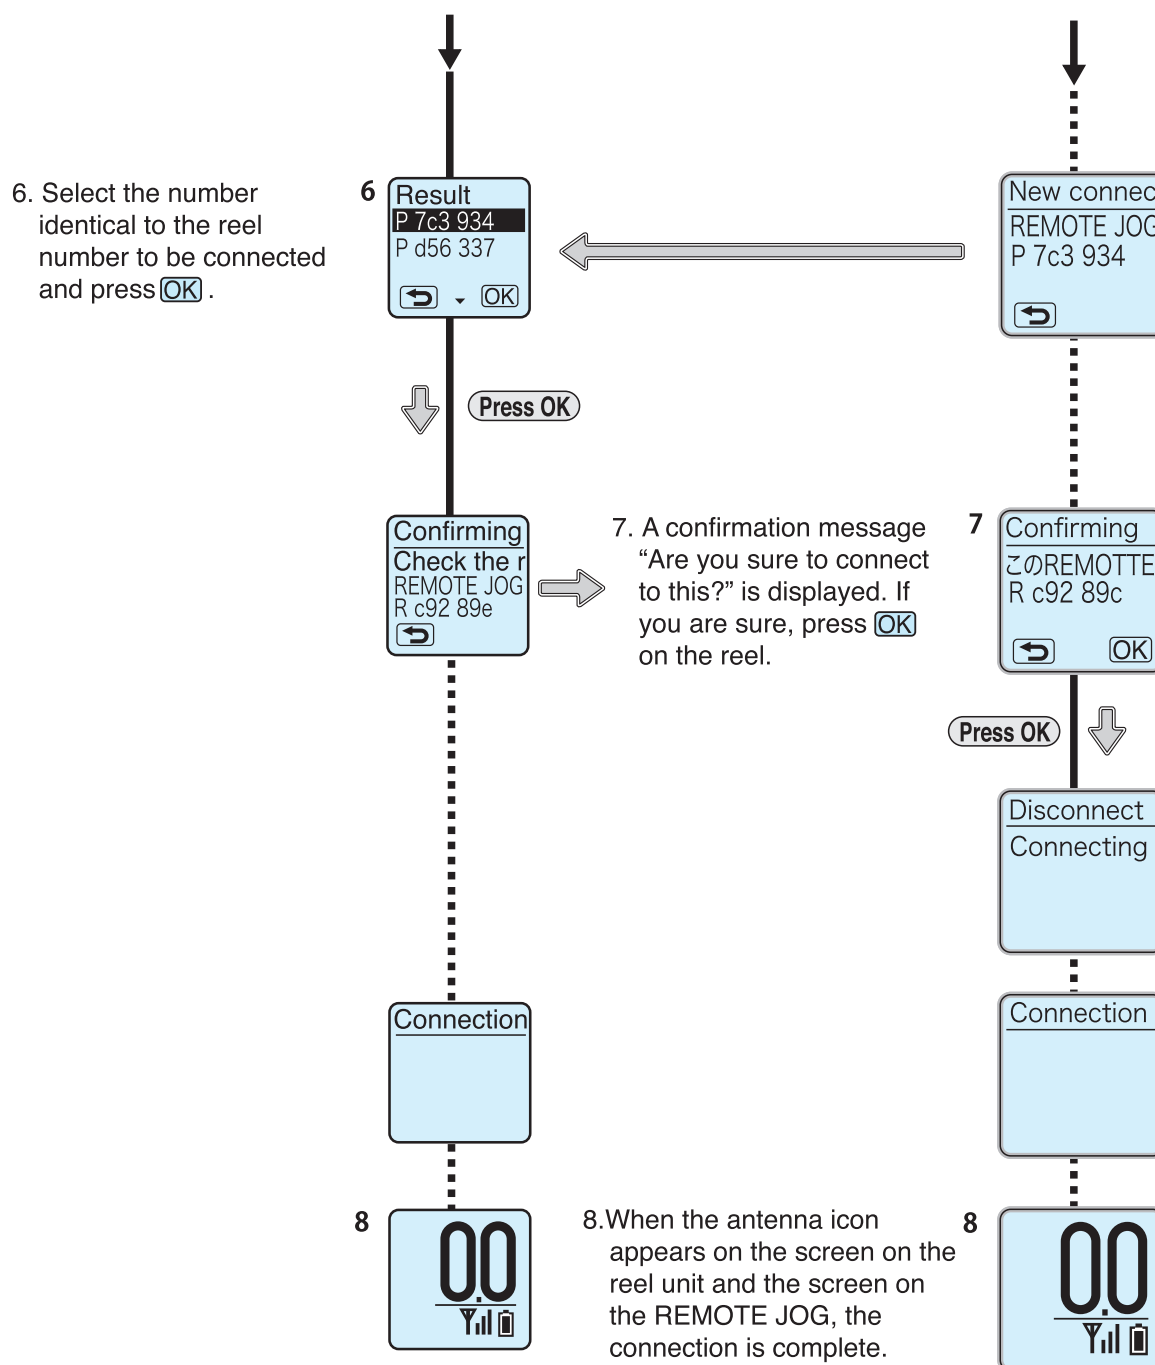

# How to replace the batteries

\* The product is shipped without batteries. So, install two AA alkaline batteries.


1. Remove the silicone cover of the REMOTE JOG.
2. Turn the battery cap using a coin in the direction of the OPEN arrow to open it.

3. Install two AA alkaline batteries in the battery case located inside.

\* Install them, noting the correct orientation of the positive (+) and negative (-) terminals of batteries.

4. Reinstall the battery case to the main unit and install the battery cap by turning it clockwise.

\* When installing the battery cap, align the alignment mark on the main unit with the alignment mark on the battery cap (A) as shown in the figure. Then, turn the cap clockwise to close securely until the alignment mark on the cap (B) is aligned with the alignment mark on the main unit.


\* When the battery case with batteries is installed into the main unit, the REMOTE JOG will be activated. If you do not wish to use the REMOTE JOG soon, close the battery cap and press and hold  BUTTON to turn off the power.

\* When installing or removing the battery cap, do not grip the strap holder part of the main unit tightly. Doing so may cause injury as it is provided with a protruding part.






\* Be sure to replace the batteries in the correct way as it may lead to unexpected injury.

\* Turning the battery cap vigorously may cause the waterproof packing to come off. So, be careful to turn it.

5. Attach the silicone cover to the REMOTE JOG. Now, replacement of batteries is complete.

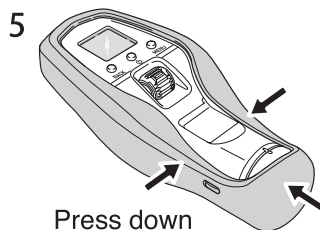

\* If the cover edge is turned-up or the strap holder is not placed in the cover as shown in the figure on the right, battery trouble may occur. Be sure to press down securely as shown in the figure on the left to ensure that the main unit is securely placed in the cover.

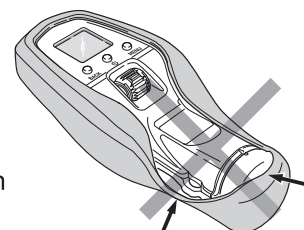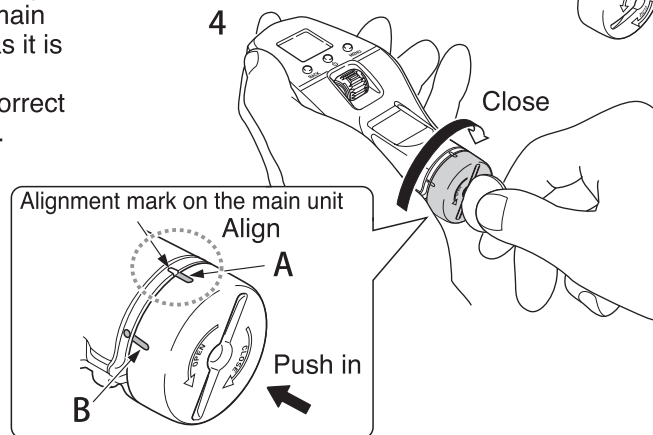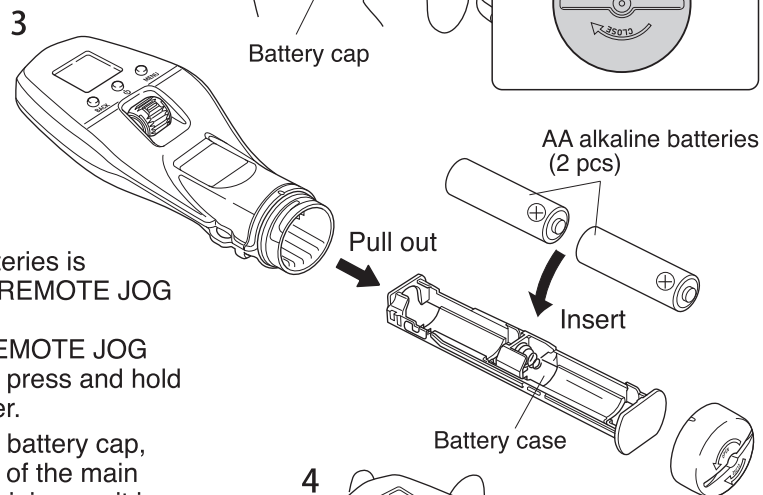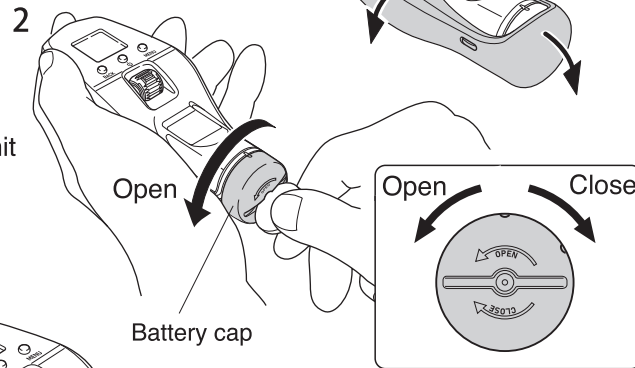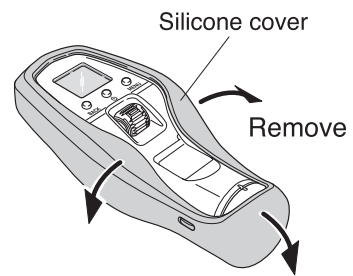


# Other configuration methods

## How to select the alarm ON/OFF


The alarm can be turned off from the alarm setting menu.

1. Press the **MENU** **BUTTON**. Select "Alarm Sound" with the Jog Power Lever and press **OK** ( **MENU** **BUTTON** ).

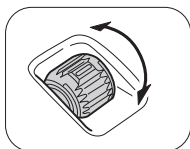

2. Select your desired option with the Jog Power Lever.
3. Press **OK** ( **MENU** **BUTTON** ) to return to the Water Depth screen. Now, the setting is complete.

\* This is set to ON by default.

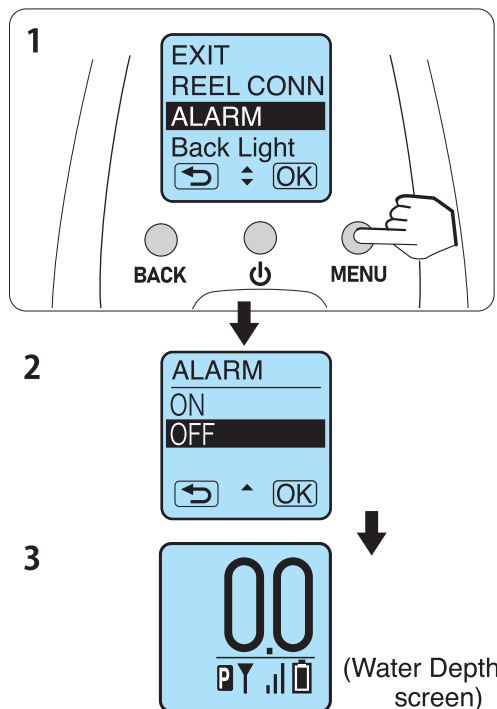


## Backlight

1. Press the **MENU** **BUTTON** when **0.0** is displayed.
2. Select "Backlight" with the Jog Power Lever and press **OK** ( **MENU** **BUTTON** ).

3. Select the backlight lighting time (seconds) with the Jog Power Lever and press **OK** ( **MENU** **BUTTON** ) to set it.

\* OFF to 30 seconds can be set for the backlight lighting time.


\* Backlight setting has a significant effect on the power consumption. So, it is recommended to select a small value or OFF as much as possible.

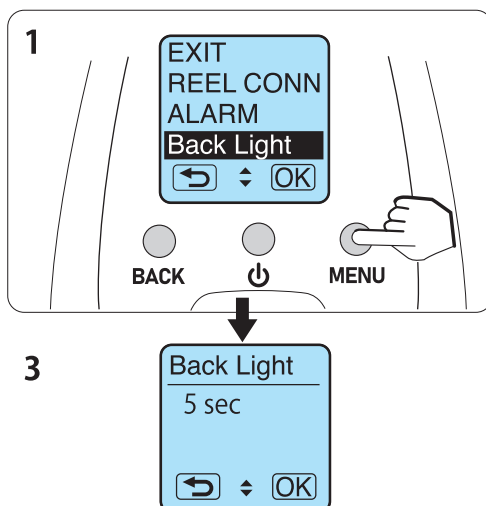

# Other configuration methods

## How to select the language


1. Press the **MENU** **BUTTON** when **0.0** is displayed.
2. Select “Language” with the Jog Power Lever and press **OK** ( **MENU** **BUTTON** ).

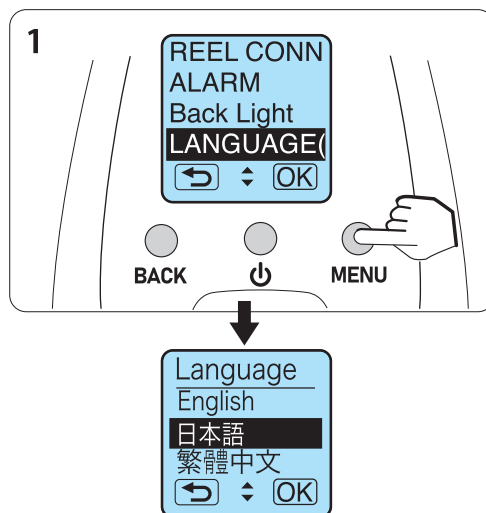

3. Select your desired language and press **OK** ( **MENU** **BUTTON** ).
- \* Available languages are English, Japanese, Traditional Chinese, Simplified Chinese, Spanish, French, German, Italian, and Korean.

## Certification

1. Press the **MENU** **BUTTON** when **0.0** is displayed.
2. Select “Certification” with the Jog Power Lever and press **OK** ( **MENU** **BUTTON** ).
3. Select “USA,Canada” or an appropriate option and press **OK** ( **MENU** **BUTTON** ).
4. The mark of “Certification of Conformity with Technical Regulations” appears.

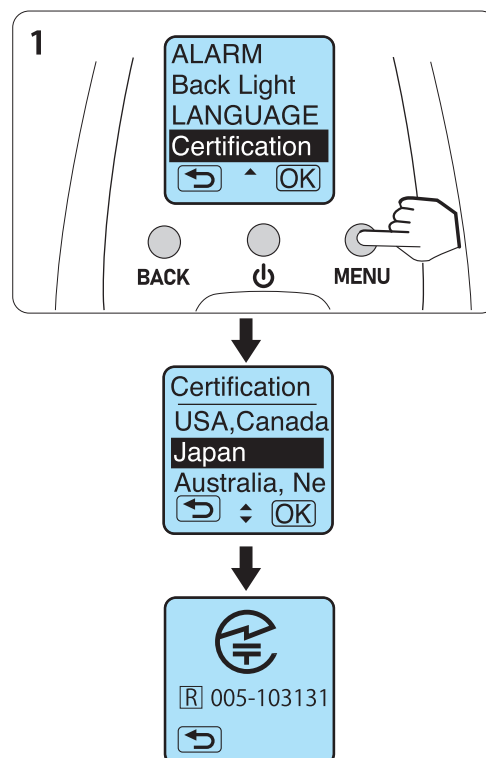

This product (REMOTE JOG) incorporates radio equipment that has achieved the “Certification of Construction Type” as a radio station for low-power data communication systems under the Radio Law.

EJ2840: 005-103131




R 005-103131

# Specifications

• Power source	AA alkaline batteries (LR6)
• Wireless frequency	2.4GHz band
• Communication standard	<b>Bluetooth®</b> Ver.5
• Weight	175g (including silicon cover, excluding batteries)
• Battery life	For approx. 5 times of fishing (approx. 8 hours for one fishing as a reference)

## Before assuming it is malfunctioning

Symptom: The reel does not function even when the REMOTE JOG is operated.

Possible causes	Actions
Is the distance between the REMOTE JOG and the reel too far apart?	Move them closer together.
Is there any obstacle between the REMOTE JOG and the reel?	Use them in a place free from obstacles.
Are the batteries set correctly?	Set the batteries in the correct way.
Are the battery level low?	Replace the batteries with new ones.
Is the reel to be used already connected to another REMOTE JOG?	Reconnect the REMOTE JOG with the reel to be used.
If the connection does not work after several attempts, restart-up the REMOTE JOG and try again.	Turn off the REMOTE JOG once and then reconnect it.
Is the REMOTE JOG or the reel in the Menu screen? (  icon appears on the REMOTE JOG or the reel)	Exit the menu to go to the Water Depth screen on both the reel and the REMOTE JOG.

\* If the above checks have been performed and the problem is still not resolved or malfunction is suspected, contact the dealer where you purchased the product or the customer service center. For any other malfunctions or ordering parts, contact in the same way.

\* This product is composed of plastic and metal parts. Follow the instructions of your local government when disposing of the product, as it is dangerous to burn it.



## EU DECLARATION of CONFORMITY (DoC)

This declaration of conformity is issued under the sole responsibility of the manufacturer:

Name: GLOBERIDE,inc  
Address: 3-14-16 Maesawa Higashikurume-shi Tokyo 203-8511 Japan

We declare that the DoC is issued under our sole responsibility and belongs to the following product.

Object of the declaration:

Product Name Remote Controller  
Model Name REMOTE JOG,  
REMOTE JOG(A)  
Software Ver. V.1.0.0.0 or later

There is no change in wireless/EMC/Safety performance due to version updates.

Build Version/ MP1  
Revision Level  
Accessories N/A



The object of the declaration described above is in conformity with the relevant Union harmonization legislation:

Radio Equipment (RE) Directive (2014/53/EU)  
RoHS Directive (2011/65/EU)

The following harmonized standards and technical specifications have been applied:

Health & Safety	EN 62368-1:2014 +A11:2017
(Article 3.1(a)):	EN 62479: 2010

EMC	EN 301 489-1 V2.2.3
(Article 3.1(b)):	EN 301 489-17 V3.2.4
	EN IEC 61000-6-3: 2021
	EN IEC 61000-6-1: 2019

Radio Spectrum	EN 300 328 V2.2.2
(Article 3.2):	

RoHS	EN IEC 63000: 2018
------	--------------------

Signed for and on behalf of:

Tokyo, Japan

Place of Issue:

December 20, 2024

Date of Issue:



Reel Product Development Dept.  
Fishing Production Div.

『パーツ情報 確認方法』



QRコードまたは検索

パーツ情報については【ダイワパーツ検索システム】よりご確認ください

ダイワパーツ検索システム

検索

**Daiwa Corporation**

20155 Ellipse  
Foothill Ranch, CA 92610, U.S.A.  
Phone: +1 562 375 6800  
www.daiwa.us

**Daiwa (Australia) Pty,Ltd.**

33 Cross Street  
Brookvale  
NSW 2100 Australia  
Phone: +61 2 8644 8644  
www.daiwafishing.com.au

**Daiwa Sports Ltd.**

Netherton Industrial Estate,  
Wishaw, ML2 0EY,  
Lanarkshire, Scotland,U.K.  
Phone: +44 1698 355723  
www.daiwasports.co.uk

**Daiwa France S.A.S.**

25 Boulevard Industriel,  
76300 Sotteville - Lès - Rouen, France  
Phone: +33 2 32 91 96 50  
www.daiwa.fr

**Daiwa Germany GmbH**

Georg Brauchle Ring 23-25  
80992 München Germany  
Phone: +49 89 309 0650  
www.daiwa.de

**Daiwa Italy S.r.l.**

Via Polesine 13 20139  
Milano, Italy  
Phone: +39 02 8725 0585  
www.daiwaitaly.it

**Daiwa Rus LLC**

Krasnoproletarskaya str. 16/2,  
office III, room 12, Moscow,  
127473, Russian Federation  
Phone: +7 495 223 71 68  
www.daiwarus.com

**Daiwa FT Enterprise  
(Taiwan) Co.,Ltd.**

No.70-2 Yueh Hu Road,  
Tun Pei Village, Hou Li District,  
Taichung city, Taiwan  
Phone: 04-2556-5099  
www.daiwaseiko.com.tw

**Daiwa Sports  
(Guangzhou) Co.,Ltd.**

1202 No.1 Longxidong Road,  
Liwan District,Guangzhou,  
China. 510375

**Daiwa Sports (M) SDN.BHD.**

No.1929, Jalan Industri Permatang  
Batu, Permatang Batu,14000 Bukit  
Mertajam, Pulau Pinang, Malaysia  
Phone: 04-540-4457  
www.daiwa.my

**Singapore Daiwa PTE. Ltd.**

6 Raffles Boulevard, Marina Square  
#03-308, Singapore 039594  
Phone: 65-6932-2688  
www.sg.daiwacm.com