




BAITCASTING REEL

ZLNSV1016H-SH

Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

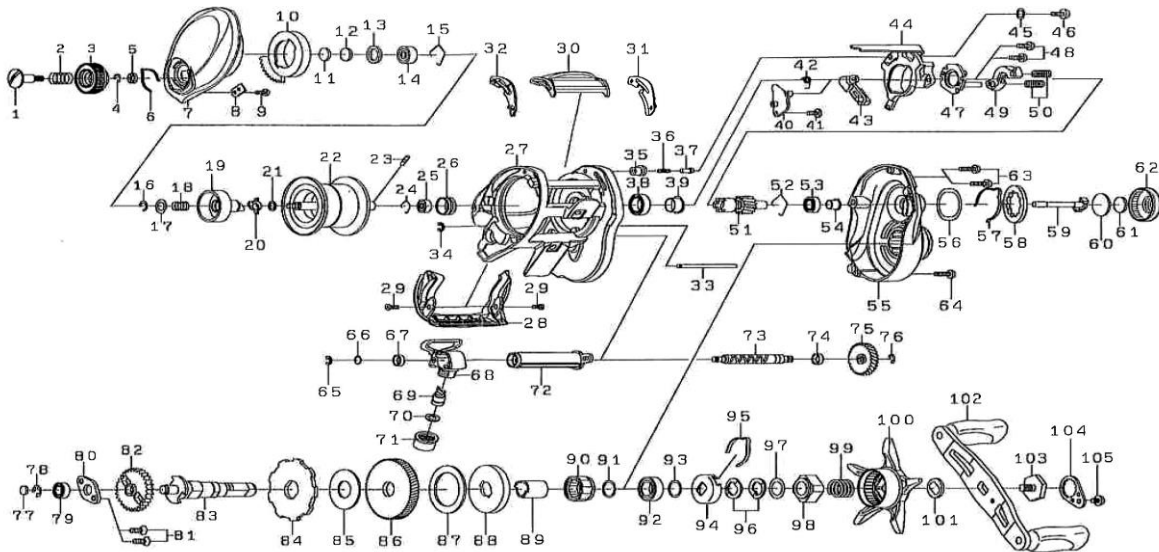

Key No.	Part No.	Part Name
1	H93-0401	SET PLT SCREW
2	E16-7101	SPRING
3	H93-0211	BRAKE ADJ KNOB
4	B33-9801	RETAINER
5	F63-7701	BRAKE DIAL WASHER
6	H66-3401	BRAKE CLICK SPRING
7	J24-4201	L/S PLT
8	H91-5501	BRAKE DIAL RETAINER
9	G93-9301	FRONT PLT SCREW
10	J24-4401	MAGNET HOLDER
11	375-7400	SPACER (A)
12	375-7411	SPACER (B)
13	G18-5101	SPACER ©
14	G51-1506	BALL BEARING
15	F03-2201	BEARING RET
16-26	Z02-2423	SPOOL ASSEMBLY
27	J24-4801	FRAME
28	J24-4001	FRONT PLT
29	H45-5402	SCREW
30	J24-2901	CLUTCH LEVER
31	H91-5601	CLUTCH LEVER PLT
32	H91-5701	CLUTCH LEVER PLT
33	J24-4101	STABILIZER BAR
34	H70-4101	STABILIZER BAR RET
35	H91-0601	COLLAR
36	H92-8801	SPRING
37	J05-5201	PIN
38	G43-1002	BALL BEARING
39	H26-6601	COLLAR
40	J24-2801	PLATE (A)
41	H29-4101	SCREW
42	J24-3201	CLUTCH CAM SPRING
43	J22-1401	CLUTCH TRIP LEVER
44	J24-2601	CLUTCH CAM PLT
45	H15-9201	WASHER
46	352-2501	SCREW
47	H65-9101	CLUTCH CAM PLT
48	B03-2904	SCREW
49	H92-9001	YOKE
50	H58-2001	YOKE SPRING
51	J07-5701	DRIVE GEAR
52	E21-9701	RETAINER
53	G46-6205	BALL BEARING
54	H15-9502	COLLAR
55	J30-6501	R/S PLT
56	J24-2201	"O" RING
57	F26-2701	BRAKE CLICK SPRING
58	F62-5503	WASHER
59	J19-8801	PINION SHAFT
60	B17-5401	SPACER
61	B17-5503	SPACER
62	J24-2303	CAST CONTROL CAP

Key No.	Part No.	Part Name
63	G04-0814	SCREW
64	G04-0801	SCREW
65	320-5901	RETAINER
66	B41-1700	WASHER
67	G72-0001	WORM SHAFT BEARING
68	J24-3301	LEVEL WIND
69	121-4212	LINE GUIDE PAWL
70	373-1300	WASHER
71	F40-2801	PAWL CAP
72	J24-3701	LEVEL WIND GUARD
73	J24-3601	WORM SHAFT
74	G72-0001	WORM SHAFT BEARING
75	H91-0501	WORM GEAR
76	B33-9801	RETAINER
77	G09-9800	WASHER
78	320-8002	RETAINER
79	B35-8605	BALL BEARING
80	H15-6501	PLATE
81	E13-4509	SCREW
82	H91-2701	DRIVE SHAFT GEAR
83	J24-3101	DRIVE SHAFT GEAR
84	H92-9401	A/R RATCHET
85	J08-5101	DRIVE SHAFT WASHER (A)
86	J07-5801	DRIVE GEAR
87	H45-2602	DRAG WASHER
88	H91-3201	KEY WASHER
89	J37-7801	GEAR SHAFT COLLAR
90	G81-9801	ROLLET CLUTCH
91	B55-3802	WASHER
92	B86-1704	BALL BEARING
93	B55-3801	WASHER
94	F02-8203	CLICK LEAF SPRING HOLDER
95	F03-2401	BRAKE CLICK SPRING
96	150-8901	SPRING WASHER
97	H92-9501	WASHER
98	J14-1001	NUT
99	J01-1901	SPRING
100	J14-0001	STAR DRAG
101	F57-6601	HANDLE COLLAR
102	J24-3801	HANDLE ASSEMBLY
103	G77-9101	HANDLE SCREW
104	H83-4505	HANDLE NUT PLT
105	353-8301	HANDLE NUT PLT SCREW

ZLNSV1016SH		
Key No.	Part No.	Part Name
3	H93-0208	BRAKE ADJ KNOB
51	J07-5301	PINON GEAR
55	J24-2001	R/S PLT
62	J24-2301	CAST CONTROL CAP
86	J07-5401	DRIVE GEAR
104	H83-4504	HANDLE NUT PLT