




Please order by parts number, not key number
 Veuillez indiquer le numéro de la pièce (Non "Key" No.)

BAITCASTING REEL LAGUNA 100HLA/100HSLA

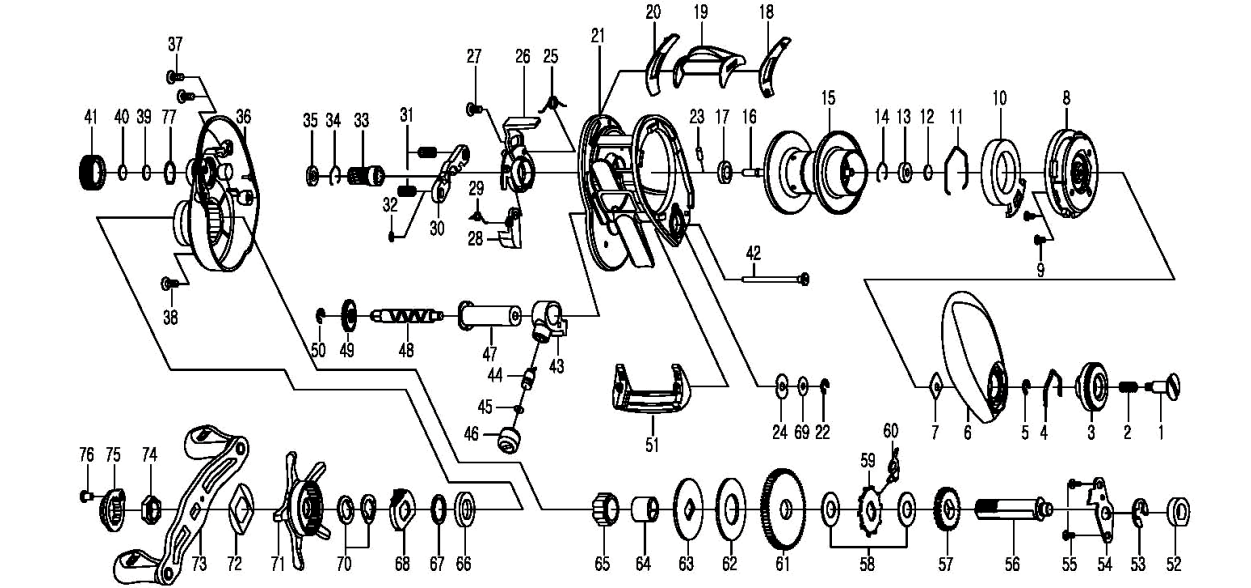

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	460-5410	SET PLT SCREW	44	400-2540	LINE GUIDE PAWL
2	510-4450	SET PLT SPRING	45	540-3980	WASHER (C)
3	550-1611	BRAKE ADJ KNOB	46	380-0780	LINE GUIDE NUT
4	510-5060	BRAKE CLICK SPRING	47	270-0720	LEVEL WIND GUARD
5	200-0530	RETAINER	48	470-2140	WORM SHAFT
6	230-2720	R/S PLATE	49	240-2180	WORM SHAFT GEAR
7	410-1911	BRAKE DIAL RETAINER (B)	50	200-0530	RETAINER
8	220-3000	SET PLATE	51	550-1770	FRONT PLATE
9	460-7080	SCREW	52	140-1850	BALL BEARING (C)
10	240-1952	MAGNET HOLDER	53	200-0580	DRIVE GEAR SHAFT RET (B)
11	430-1070	MAGNET HOLDER RET	54	410-2210	DRIVE GEAR SHAFT RET (A)
12	540-7170	SPACER (A)	55	460-1860	SCREW
13	140-1400	BALL BEARING (A)	56	470-1940	DRIVE SHAFT
14	430-1061	BEARING RETAINER	57	240-2190	DRIVE GEAR (A)
15-17,23	700-9750	SPOOL ASSEMBLY	58	540-6840	WASHER
18	410-2150	CLUTCH LEVER PLT B	59	240-2530	A/R RATCHET
19	090-0261	CLUTCH LEVER	60	530-0840	A/R PAWL
20	410-2140	CLUTCH LEVER PLT C	61	250-1323	DRIVE GEAR
21	110-2070	FRAME ASSEMBLY	62	540-6870	DRAG WASHER
22	200-0530	RETAINER	63	540-6910	KEY WASHER
23	400-2250	SPOOL PIN	64	150-2280	GEAR SHAFT COLLAR
24	540-6060	WORM SHAFT WASHER	65	140-1810	ROLLER CLUTCH
25	510-5400	CLUTCH CAM SPRING (A)	66	140-0610	BALL BEARING (D)
26	170-1330	CLUTCH CAM	67	540-1490	SPACING WASHER
27	460-5440	SCREW	68	510-5370	CLICK LEAF SPRING HOLDER
28	330-2830	CLUTCH TRIP PLATE	69	540-3930	WASHER
29	510-5080	CLUTCH CAM SPRING (B)	70	540-6390	DRAG SPRING WASHER
30	410-1920	YOKE	71	320-1270	STAR DRAG
31	510-4770	YOKE SPRING	72	510-3260	LEAF SPRING (B)
32	540-6020	WASHER (B)	73	700-8760	HANDLE ASSEMBLY
33	260-1690	PINION GEAR	74	380-0880	HANDLE NUT
34	430-1061	BEARING RETAINER	75	180-2471	HANDLE NUT PLATE
35	140-1820	BALL BEARING (B)	76	460-0450	SCREW
36	230-2710	L/S PLATE	77	430-1080	O-RING
37	460-1570	SCREW			
38	460-5450	SCREW			
39	540-6850	SPACER (D)			
40	540-4340	SPACER (E)			
41	380-2020	CAST CONTROL CAP			
42	400-2531	LONG SCREW			
43	490-1080	LINE GUIDE			
44	400-2540	LINE GUIDE PAWL			
45	540-3980	WASHER (C)			
46	380-0780	LINE GUIDE NUT			
47	270-0720	LEVEL WIND GUARD			
48	470-2140	WORM SHAFT			
49	240-2180	WORM SHAFT GEAR			
50	200-0530	RETAINER			
51	550-1770	FRONT PLATE			
52	140-1850	BALL BEARING (C)			
53	200-0580	DRIVE GEAR SHAFT RET (B)			
54	410-2210	DRIVE GEAR SHAFT RET (A)			
55	460-1860	SCREW			
56	470-1940	DRIVE SHAFT			
57	240-2190	DRIVE GEAR (A)			
58	540-6840	WASHER			
59	240-2530	A/R RATCHET			
60	530-0840	A/R PAWL			
61	250-1323	DRIVE GEAR			
62	540-6870	DRAG WASHER			
63	540-6910	KEY WASHER			
64	150-2280	GEAR SHAFT COLLAR			
65	140-1810	ROLLER CLUTCH			
66	140-0610	BALL BEARING (D)			
67	540-1490	SPACING WASHER			
68	510-5370	CLICK LEAF SPRING HOLDER			
69	540-3930	WASHER			
70	540-6390	DRAG SPRING WASHER			
71	320-1270	STAR DRAG			
72	510-3260	LEAF SPRING (B)			
73	700-8760	HANDLE ASSEMBLY			
74	380-0880	HANDLE NUT			
75	180-2471	HANDLE NUT PLATE			
76	460-0450	SCREW			
77	430-1080	O-RING			

LAGUNA 100HLSA SPECIAL PARTS

Key No.	Part No.	Part Name
33	260-1701	PINION GEAR
36	230-2711	L/S PLATE
61	250-1324	DRIVE GEAR