


SB1200MJ

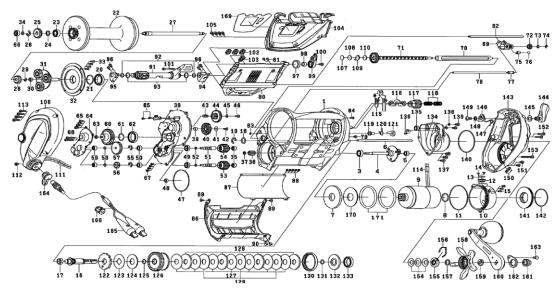

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	J42-4001	FRAME	87	J42-5501	MOTOR GUARD PLATE
2	-		88	H58-5401	MOTOR GUARD PLATE SCREW
3	G15-6801	MOTOR GEAR BALL BEARING A	89	H45-5408	FRONT COVER SCREW (A)
4 5	J42-4301 B35-8605	MOTOR MOTOR TRANSMISSION GEAR MOTOR GEAR BALL BEARING B	90 91	F50-5705 142-5601	FRONT COVER SCREW (B) JOG POWER LEVER (A)
6	J26-7502	LINE GUARD POST	92	H71-4501	JOG POWER LEVER (A) JOG POWER LEVER O- RING
7	J26-7401	MOTOR PLATE	93	F95-6701	JOG POWER LEVER WASHER
8	G37-8001	MOTOR O RING (A)	94	J29-1801	JOG POWER LEVER HOLDER (R)
9 10	J26-7601 J26-7901	MOTOR ASSY MOTOR HOLDER	95 96	J29-1901	JOG POWER LEVER HOLDER (L) JOG POWER LEVER HOLDER SCREW
11	F59-5801	MOTOR HOLDER MOTOR HOLDER O RING	96	B55-7607 J26-6901	JOG POWER LEVER HOLDER SCREW
12	J26-8001	MOTOR HOLDER DACKING	98	F59-0101	JOG POWER LEVER COLLAR
13	373-7810	MOTOR HOLDER PACKING WASHER	99	J27-2101	JOG POWER LEVER (B)
14	H53-1504	MOTOR HOLDER PACKING SCREW	100	H75-3310	JOG POWER LEVER (B) SCREW
15 16	E13-4509 J26-8101	MOTOR HOLDER SCREW DRIVE SHAFT	101	J32-6101 J27-2201	JOG POWER LEVER SCREW
17	G96-1301	DRIVE SHAFT DRIVE SHAFT COLLAR	103	J27-2301 J27-2301	SHIFT SWITCH BUTTON
18	373-7808	DRIVE SHAFT WASHER	104	J42-5901	IC MODULE COVER
19	B01-3101	DRIVE SHAFT RETAINER	105	G94-5801	IC MODULE COVER SCREW
20	E29-2701	SPOOL PLATE BALL BEARING	106	J42-6101	L/S PLATE
21 22	F68-2601 J42-4601	SPOOL PLATE WASHER SPOOL ASSY	107 108	F67-3802 B17-5501	MECHANICAL BRAKE KNOB WASHER (A) MECHANICAL BRAKE KNOB WASHER (B)
23	J03-0301	SPOOL SHAFT BALL BEARING (A)	109	J05-6901	MECHANICAL BRAKE KNOB WASHER (C)
24	E15-4801	SPOOL SHAFT GEAR WASHER	110	G22-5103	MECHANICAL BRAKE KNOB WASHER (D)
25	G67-5001	SPOOL SHAFT GEAR (B)	111	G07-9502	SHRINK TUBING WRAP
26 27	320-1611	SPOOL SHAFT GEAR RETAINER	112 113	H75-3310 H75-3311	L/S PLATE SCREW (A) L/S PLATE SCREW (B)
28	J26-8801	SPOOL SHAFT SPOOL SHAFT GEAR (A)	114	G07-9502	SHRINK TUBING WRAP
29	320-1402	SPOOL SHAFT GEAR (A) RETAINER	115	J27-3501	YOKE PLATE
30	G46-9005	SPOOL GEAR BALL BEARING	116	J27-3701	PINION YOKE
31	J26-8901	MOTOR GEAR	117	J27-3801	PINION GEAR
32 33	J26-9501 E13-4505	SPOOL COVER PLATE SPOOL PLATE SCREW	118 119	G47-3401 F77-3001	PINION YOKE SPRING A/R PIN
34	F35-2701	SPOOL SHAFT WASHER	120	G67-7701	A/R SPRING
35	E08-8005	MOTOR GEAR BALL BEARING	121	J56-6301	A/R CLAW
36	J26-9601	MOTOR GEAR (B)	122	J27-3901	RATCHET
37 38	B41-1711 J26-9701	MOTOR GEAR (B) WASHER	123 124	J27-4101 J27-4201	RATCHET WASHER DRIVE GEAR WASHER
39	F57-3101	SET PLATE (A) IDLE GEAR (A) COLLAR	125	H15-6901	GEAR SHAFT O- RING
40	F59-2101	IDLE GEAR (A)	126	J27-4301	DRIVE GEAR
41	F44-0201	IDLE GEAR (A) WASHER	127	H47-0801	DRAG WASHER
42	G94-0404	IDLE GEAR (A) SCREW	128	H47-0902	DRAG DISC WASHER
43 44	G07-6501 G67-3301	IDLE GEAR (B) COLLAR IDLE GEAR (B)	129 130	H47-1002 J27-4401	DRAG KEY WASHER DRAG PACKKING
45	B55-4302	IDLE GEAR (B) WASHER	131	H15-6901	DRAG O- RING
46	G94-0404	IDLE GEAR (B) SCREW	132	J27-4501	DRAG COLLAR
47	G15-8601	SET PLATE O RING	133	G07-4101	BALL BEARING
48 49	G46-9005 G52-2702	SET PLATE BALL BEARING MOTOR GEAR SHAFT BALL BEARING	134 135	J27-4601 G31-4902	R/S COVER A R/S COVER BALL BEARING
50	B35-8605	SET PLATE GEAR BALL BEARING	136	G94-0405	R/S COVER BALL BEARING SCREW
51	J27-0001	MOTOR GEAR SHAFT	137	351-6108	R/S COVER SCREW (A)
52	H07-8001	MOTOR GEAR SHAFT O RING	138	G28-1401	R/S COVER SCREW (B) WASHER
53 54	G67-4101 G67-4401	MOTOR GEAR (HIGH) MOTOR GEAR (LOW)	139 140	H75-3310 J32-6601	R/S COVER SCREW (B) R/S COVER O- RING
55	320-8002	MOTOR GEAR (LOW)	141	J27-4801	MOTOR HOLDER PLATE
56	G67-4001	IDLE GEAR (C)	142	F46-5901	MOTOR HOLDER PLATE O- RING
57	G67-3901	IDLE GEAR (D)	143	J27-4902	R/S COVER B
58	F88-9103	IDLE GEAR WASHER	144	J27-5001	CLUTCH LEVER
59 60	E08-8005 J27-0101	IDLE GEAR BALL BEARING IDLE GEAR (E)	145 146	J26-8201 F59-7901	CLUTCH LEVER WASHER CLUTCH CAM
61	G67-2401	IDLE GEAR (E) O RING	147	J27-5301	CLUTCH CAM SPRING
62	E29-2701	IDLE GEAR (E) BALL BEARING	148	160-8001	CLUTCH CAM WASHER
63	G07-7201	IDLE GEAR (E) COLLAR	149	353-8212	CLUTCH CAM SCREW
64 65	J27-0301 B55-7607	SET PLATE (B) SET PLATE (B) SCREW	150 151	E28-6001 H75-3310	LINE HOLDER R/S PLATE SCREW (A)
66	637-2102	SPOOL SHAFT BALL BEARING (B)	151	H75-3310	R/S PLATE SCREW (A) R/S PLATE SCREW (B)
67	E13-4508	SET PLATE SCREW (A)	153	H75-3312	R/S PLATE SCREW (C)
68	G78-5801	SET PLATE SCREW (B)	154	F67-3601	DRAG SPRING WASHER
69	J27-0401	LEVELWIND ASSY	155	H69-1901	CLICK LEAF SPRING HOLDER
70 71	J42-4901 J42-5001	WORM SHAFT GUARD WORM SHAFT ASSY	156 157	H93-3201 H92-9501	CLICK LEAF SPRING SPACING SLEEVE
72	F46-7201	WORM SHAFT COLLAR	158	J27-5601	STAR DRAG
73	B41-1706	WORM SHAFT WASHER	159	F86-3202	HANDLE COLLAR
74	320-5901	WORM SHAFT RETAINER	160	J27-5801	HANDLE ASSY
75 76	J27-1201	OSC PAWL OSC PAWL WASHER	161	G63-4603 B88-4703	HANDLE NUT HANDLE NUT PLATE
76	G09-9801 J27-1301	LEVELWIND POST COLLAR	162 163	J31-6701	HANDLE NUT PLATE HANDLE NUT PLATE SCREW
78	J27-1301 J27-1402	LEVELWIND POST COLLAR	164	J18-4201	CONNECTOR CAP
79	G94-0405	LEVELWIND POST SCREW	165	J32-3801	POWER CORD
80	J42-5201	IC MODULE	166	G90-5401	POWER CORD FERRITE
81 82	E13-4508 J27-1602	IC MODULE SCREW IC MODULE POST	167 168	-	
82	B86-4101	IC MODULE POST IC MODULE POST RETAINER	168	J42-6003	IC MODULE COVER PLATE
84	B55-7606	SENSOR SCREW (A)	170	J58-1201	MOTOR WASHER
85	H15-8201	SENSOR SCREW (B)	171	J58-1601	MOTOR O RING (B)
86	J42-5401	FRONT COVER			