
Please order by parts number, not key number Veuillez indiquer le numéro de la pièce (Non "Key" No.)

SPINNING REEL CERTATE-HD3500-4000H

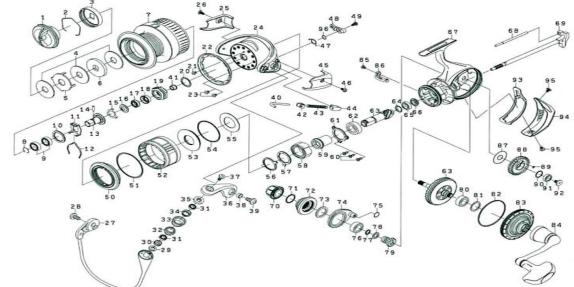

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	J41-5501	DRAG KNOB	51	H17-6501	O RING
2	F71-0001	DRAG WASHER RET	52	J30-1701	COVER NUT
3	F89-5302	DRAG KNOB CLICK PLT	53	H61-9301	MAGNET
4	J23-0101	WASHER	54	H45-2801	O RING
5	F62-7301	EARED WASHER	55	H61-9201	WASHER
6	H71-4001	KEY WASHER	56	H69-0201	CLUTCH CAM RETAINER
2~7	J30-3401	SPOOL ASSEMBLY	57	H62-4501	CLUTCH CAM
8	G52-5101	BEARING RET	58	G31-4501	ROLLER CLUTCH
9	G74-7401	COLLAR	59	H78-2302	SPACING SLEEVE
10	G90-3900	WASHER	60	E13-4508	SCREW
11	G69-4001	CLICK LEAF SPRING HOLDER	61	G52-2901	BEARING RET
12	H73-7101	LEAF SPRING	62	G52-2803	BALL BEARING
13	J30-2801	SPOOL METAL	63	Z02-2636	PINION + DRIVE GEAR UNIT
14	F64-3601	PIN	64	G57-8501	WASHER
15	G52-4801	BEARING RET	65	G52-2705	BALL BEARING
16	H62-1501	PACKING	66	H61-8001	COLLAR
17	G21-2503	BALL BEARING	67	J30-0101	BODY
18	J30-2501	COLLAR	68	H63-9301	STABILIZER BAR
19	J30-2401	ROTOR NUT	69	J30-0601	MAIN SHAFT
20	G64-5603	WASHER	70	J30-3301	HANDLE SCREW CAP
21	H02-2701	SCREW	71	G16-2401	O RING
22	J30-2301	LINE GUARD RING	72	J30-1402	BODY COVER (A) R
23	H02-2701	SCREW	73	J30-1301	COLLAR
24	J30-2101	ROTOR	74	J30-0301	SET PLATE
25	J30-2201	SIDE COVER (A)	75	J30-0401	O RING
26	H43-1301	SCREW	76	J04-0001	BALL BEARING (MS)
27	H99-4703	BAIL ASSEMBLY	77	J18-5701	ORING
28	H43-1201	SCREW	78	G80-0701	BALL BEARING
29	B41-1700	WASHER	79	J30-0501	GEAR
30	H74-3401	MAGNET	80	J04-0001	BALL BEARING (MS)
31	G68-6903	BALL BEARING	81	G64-5600	DRIVE GEAR WASHER
32	H74-3701	COLLAR	82	H50-2601	O RING
33	H74-3801	LINE ROLLER	83	J30-1501	BODY COVER (A) L
34	H74-3901	COLLAR	84	J30-2901	HANDLE ASSEMBLY
35	H74-4001	MAGNET	85	H45-5407	SCREW
36	H96-0102	ARM LEVER	86	H77-5701	COLLAR
37	H69-7701	SCREW	87	G64-4203	WASHER
38	H96-2401	COLLAR	88	J30-4201	OSC GEAR
39	H43-1201	SCREW	89	B85-3101	O RING
40	H64-0601	BAIL SPRING SHAFT	90	G52-2100	WASHER
41	J40-1401	COLLAR	91	G46-7102	BALL BEARING
42	H57-6101	BAIL SPRING PLT	92	H27-2202	SCREW
43	H64-0701	BAIL SPRING	93	J30-1901	PACKING
44	J08-9401	BAIL SPRING HOLDER	94	J30-2001	REAR COVER
45	H99-4601	COVER (A)	95	H75-3302	SCREW
46	H43-1301	SCREW	96	J33-9501	WASHER (THICKNESS 0.05)
47	H41-3601	BAIL TRIP LEVER SPRING			
48	H99-4401	BAIL TRIP LEVER	SP	ECIAL PARTS	FOR CERTATE-HD4000H
49	H41-7701	SCREW	Key No.	Part No.	Part Name
50	J30-1801	NUT	7	J33-2201	SPOOL ASSEMBLY